 
 
 
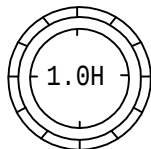 
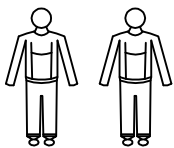 



Seaford

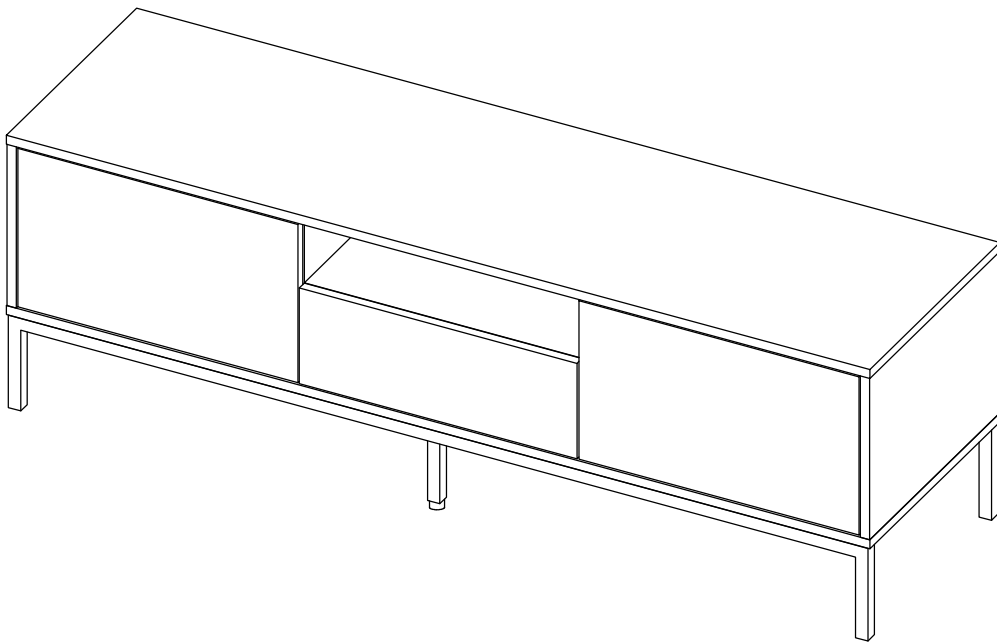

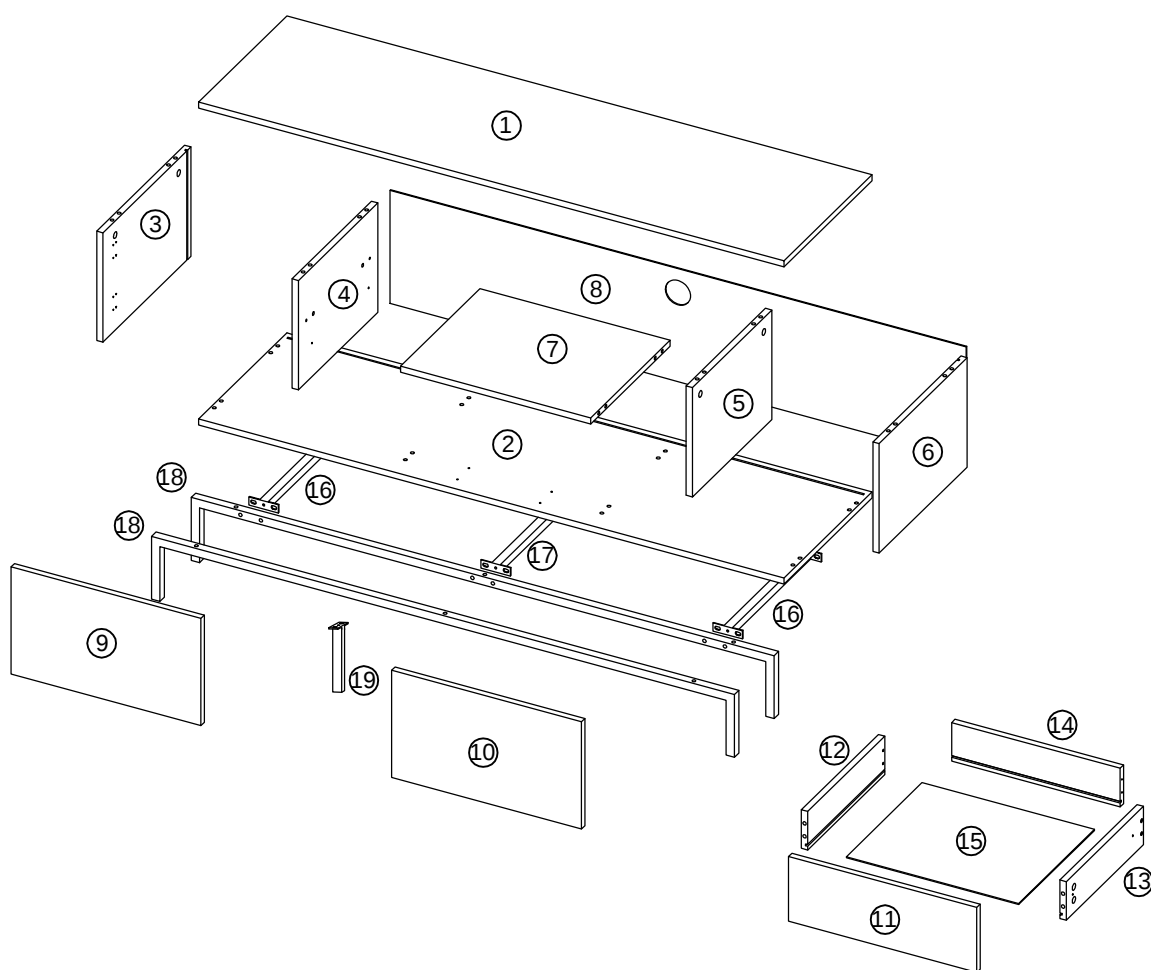


A 6.3×45mm  16PCS	B Ø15×12mm  16PCS	C Ø8×30mm  20PCS	D 7×38mm  8PCS	E 4×35mm  4PCS	F 3.5×14mm  40PCS
G L=350mm  2PCS	H  4PCS	I  4PCS	J  4PCS	K 4mm  1PC	L M6×30mm  6PCS
M M6×15mm  14PCS	N  1PC				

 
1

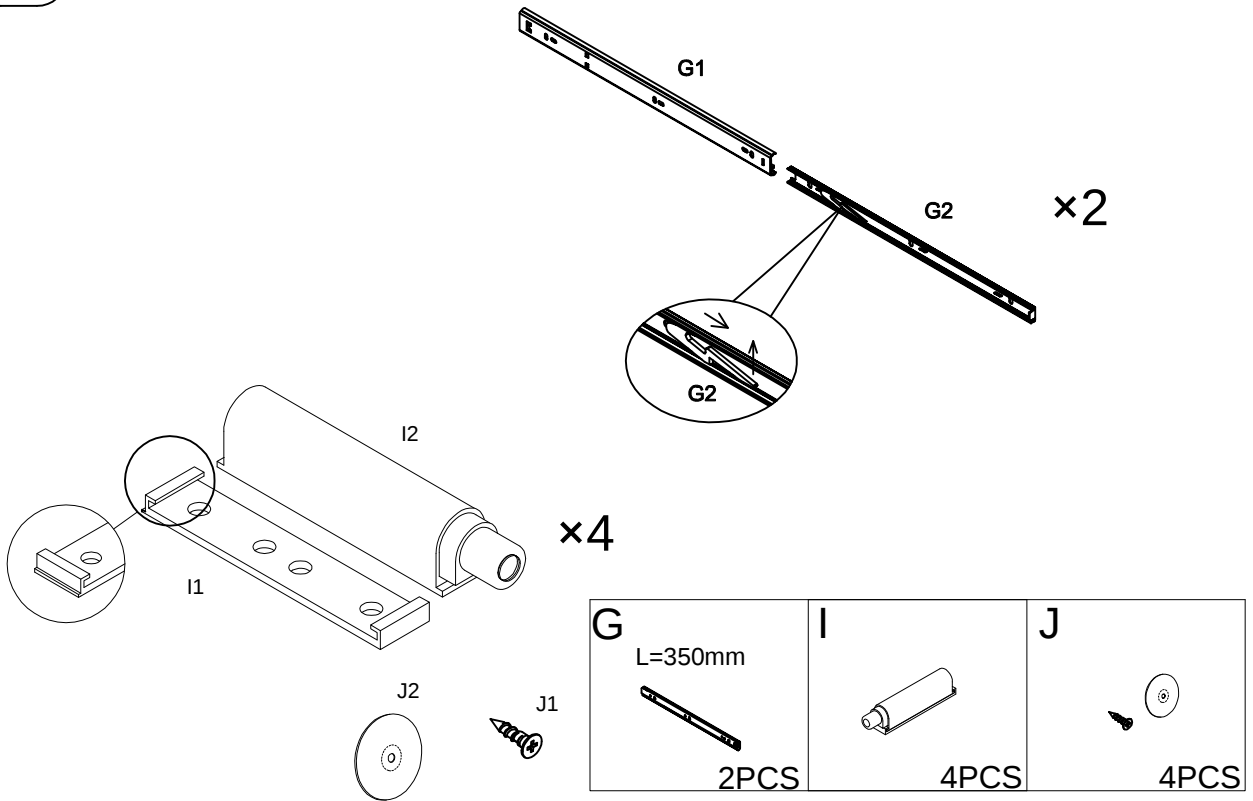


2

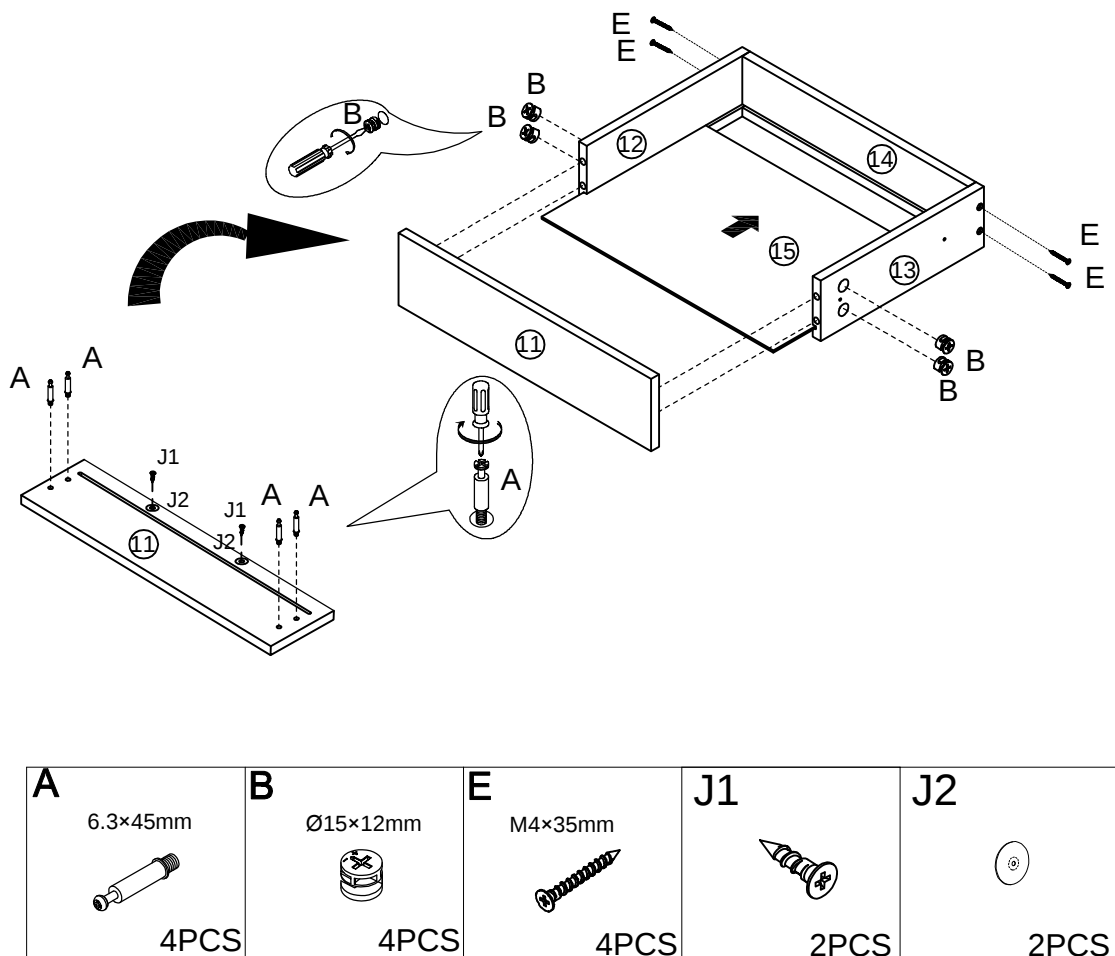 


3

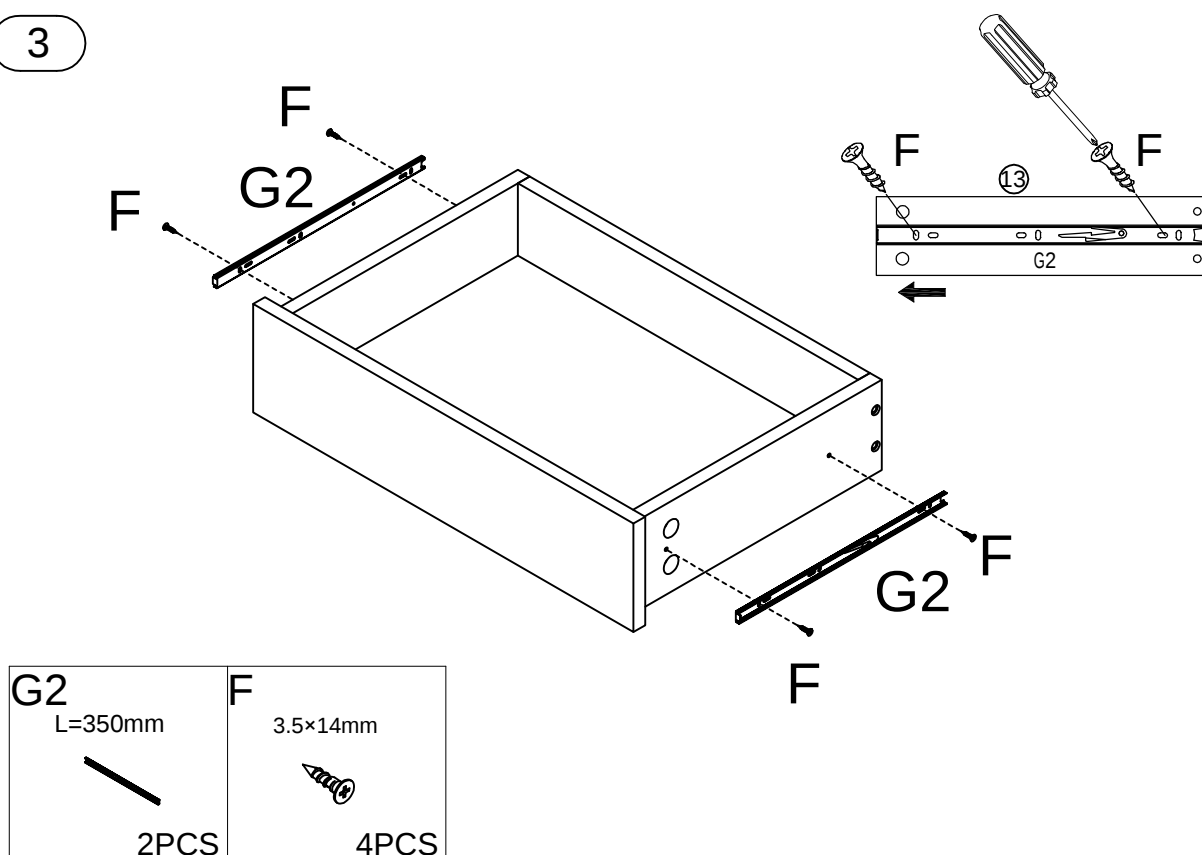 


4

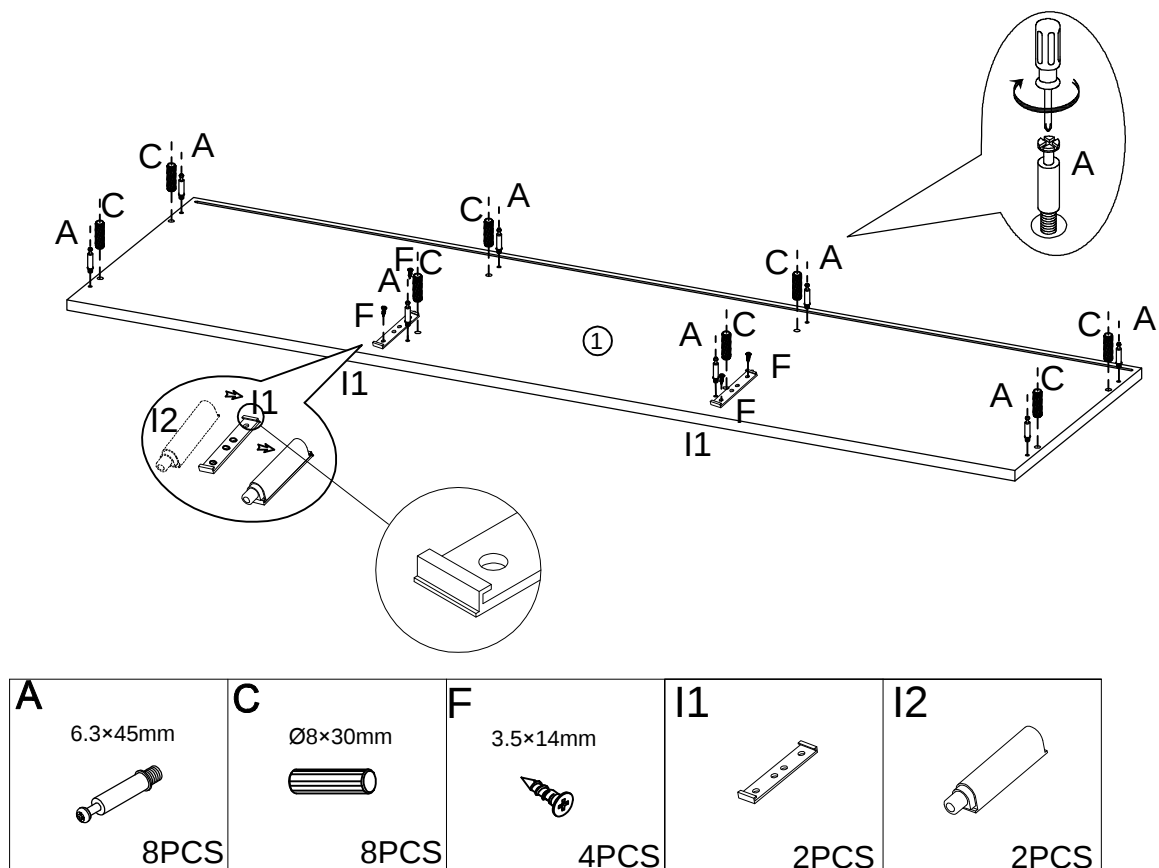 



5

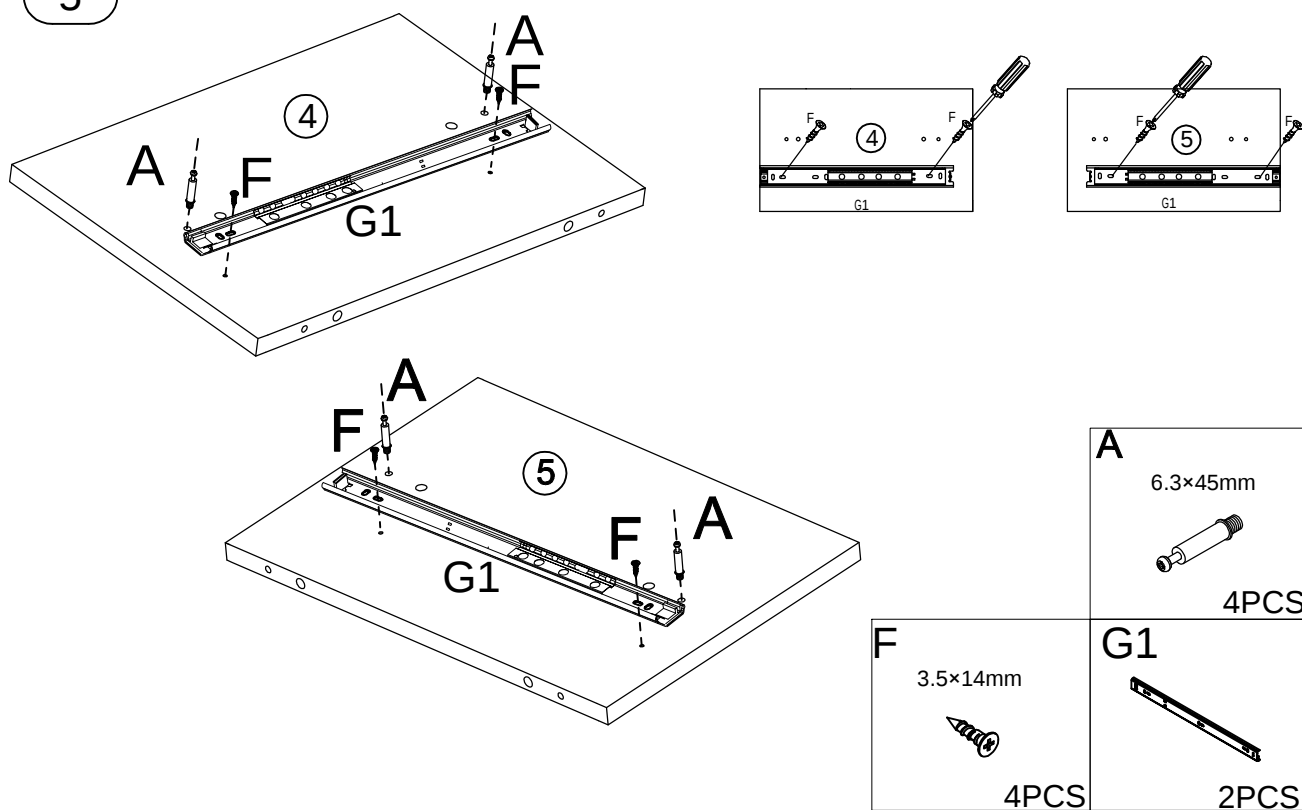 



6

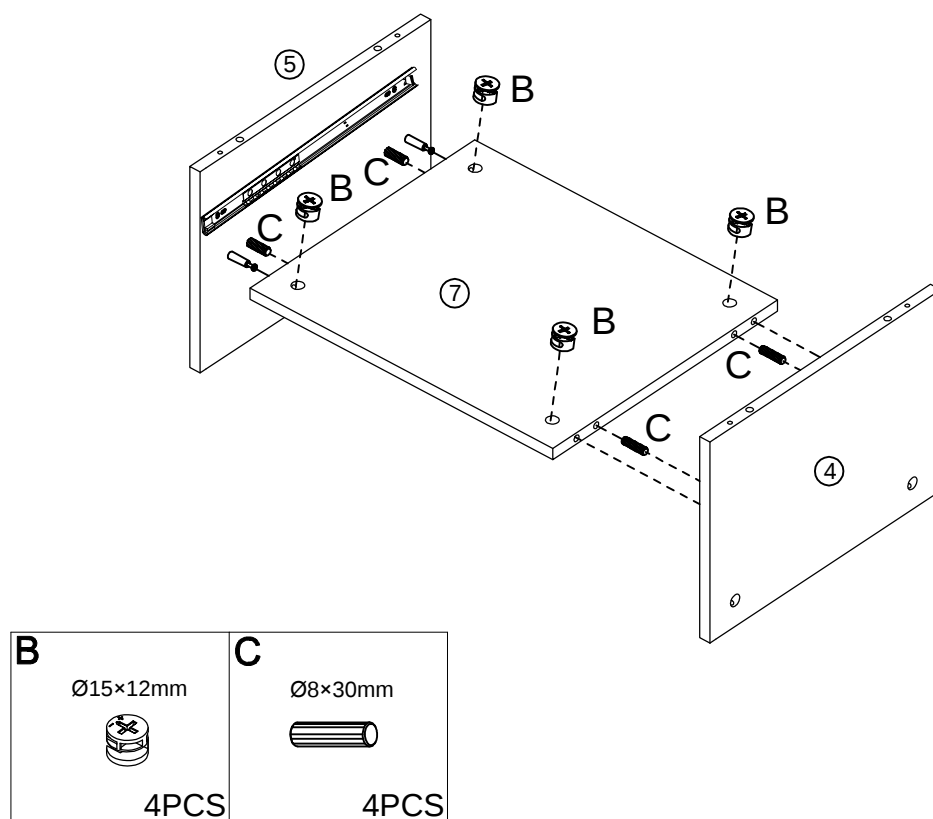 


7

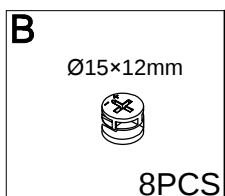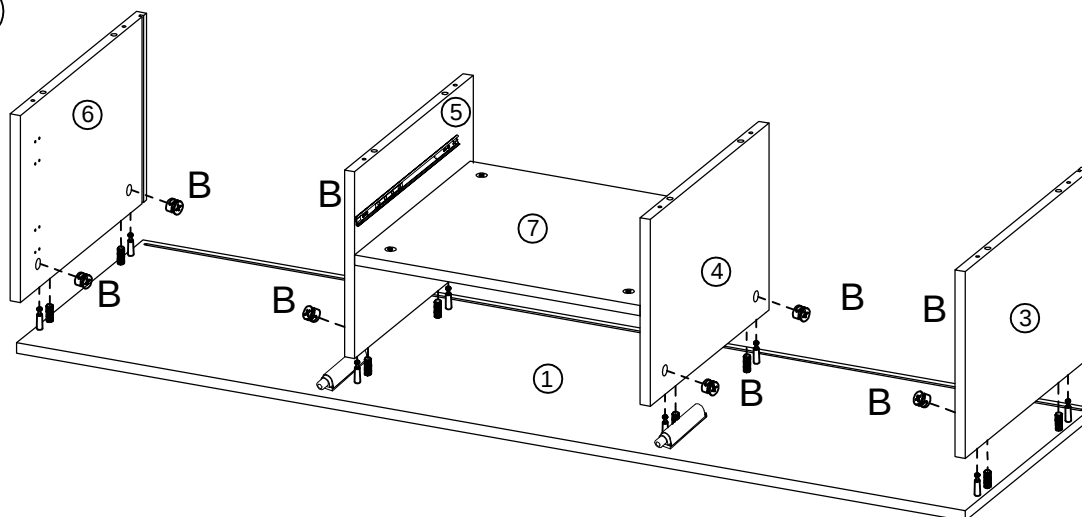  


8

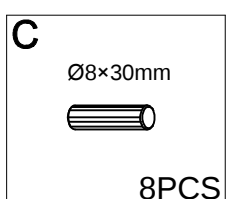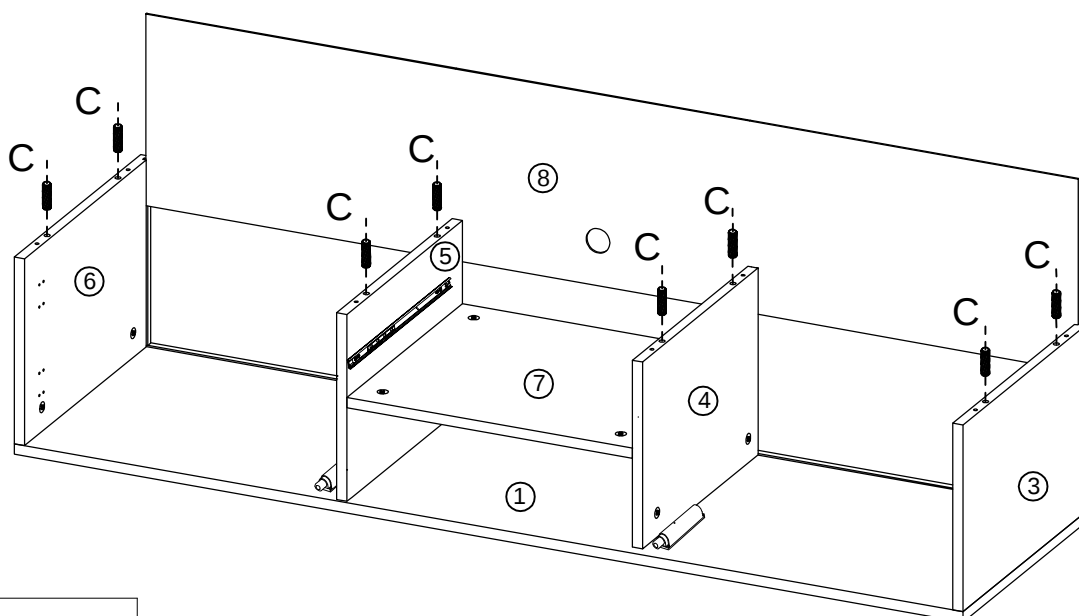  


9

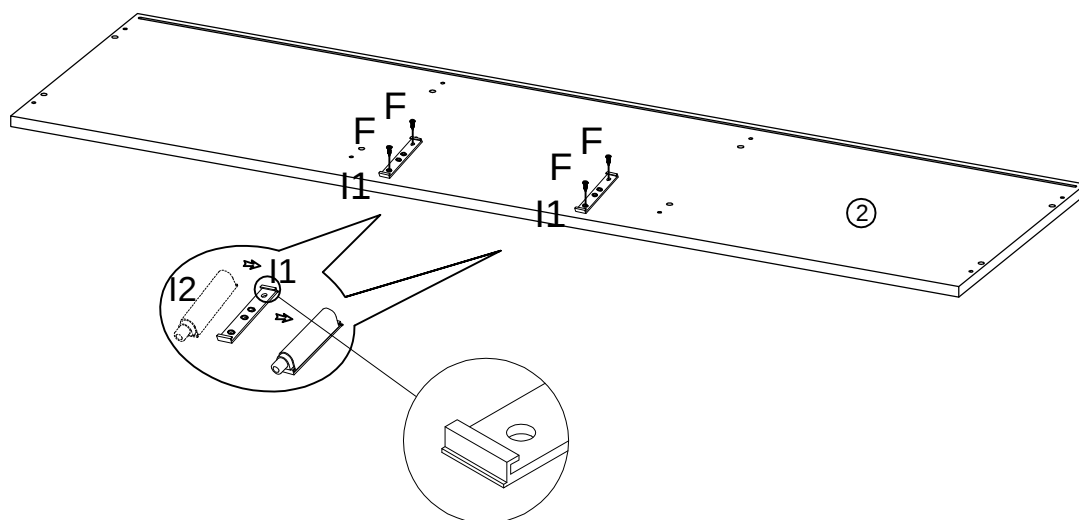 

 
F M3.5×14mm 	I1 	I2 
4PCS	2PCS	2PCS

 10

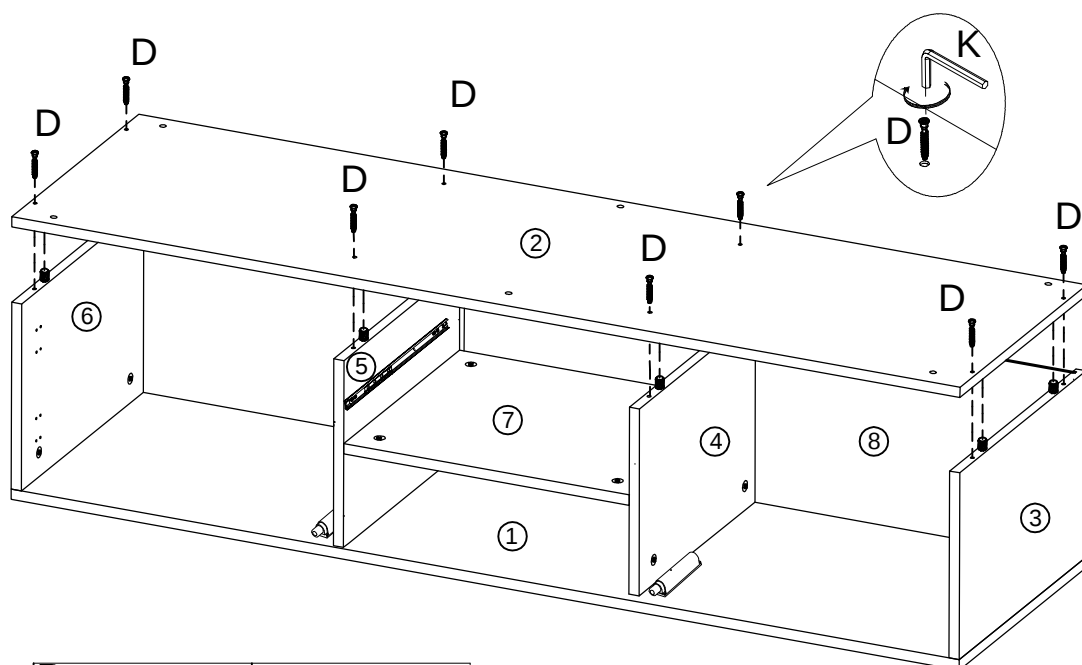


D 7×38mm 	K 4mm 
8PCS	1PC

 11

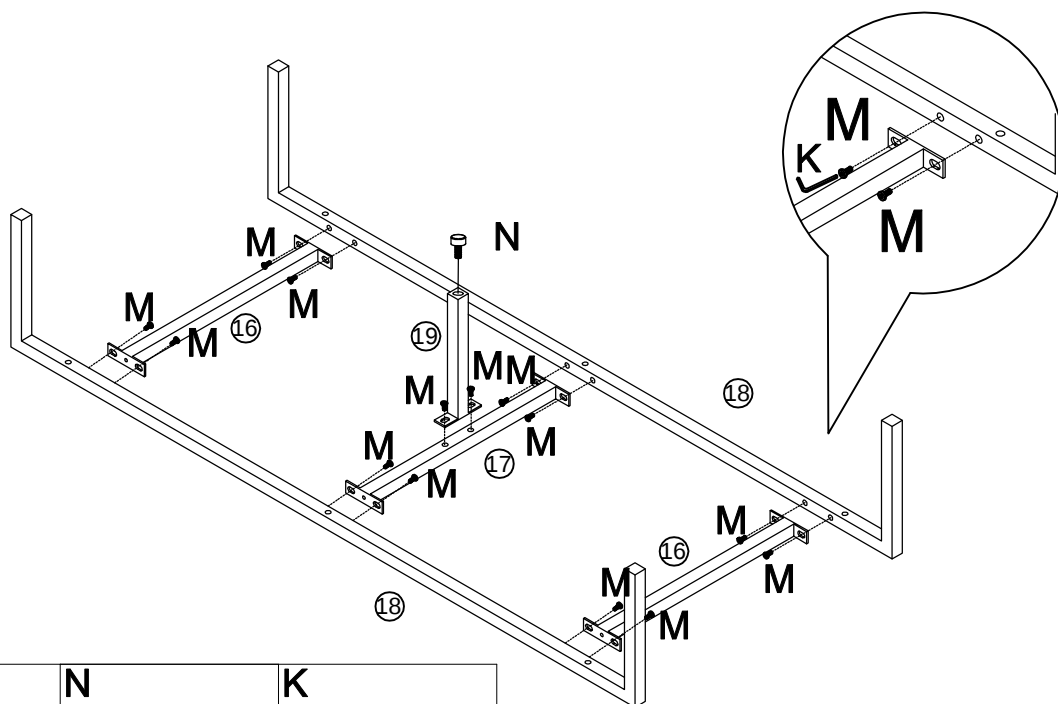


M M6×15mm  14PCS	N  1PC	K 4mm  1PC
---	--	---

 12

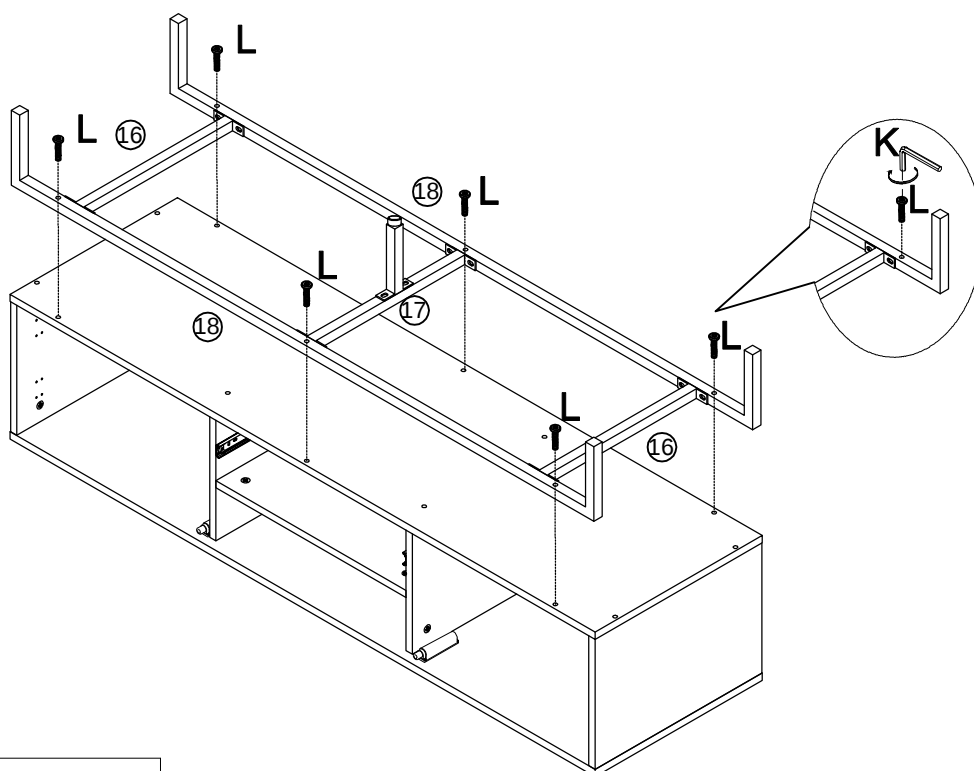


L M6×30mm  6PCS	K 4mm  1PC
--	---

 13

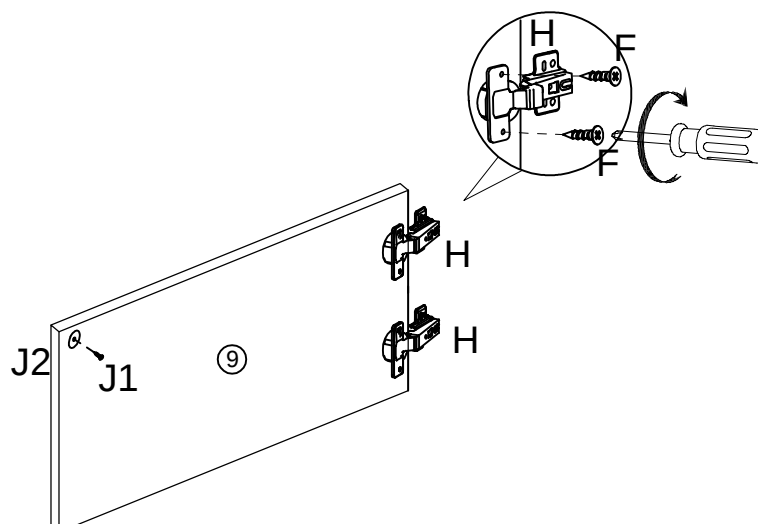

F	H	J1	J2
M3.5×14mm			
4PCS	2PCS	1PC	1PC

 
14

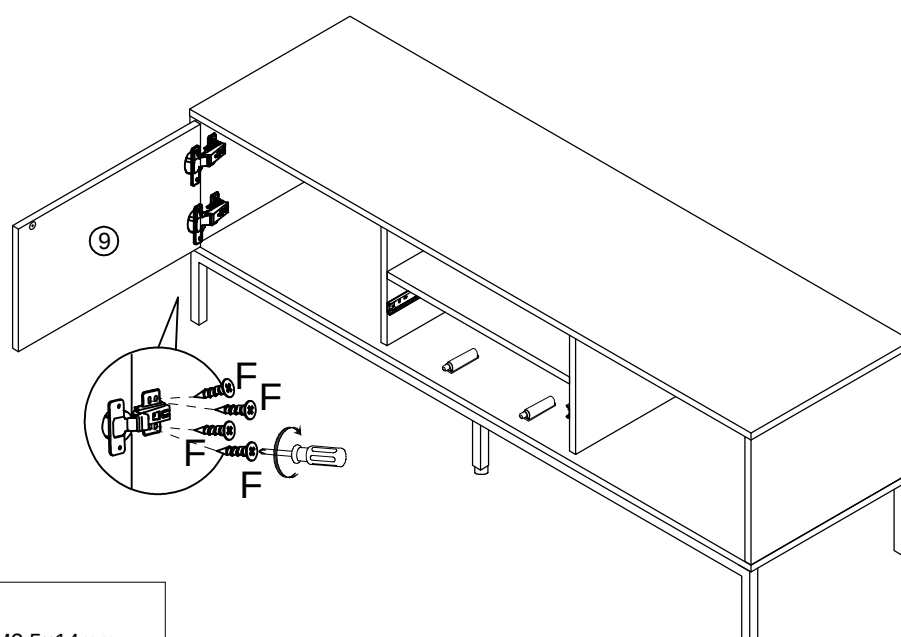

F
M3.5×14mm


8PCS

 15

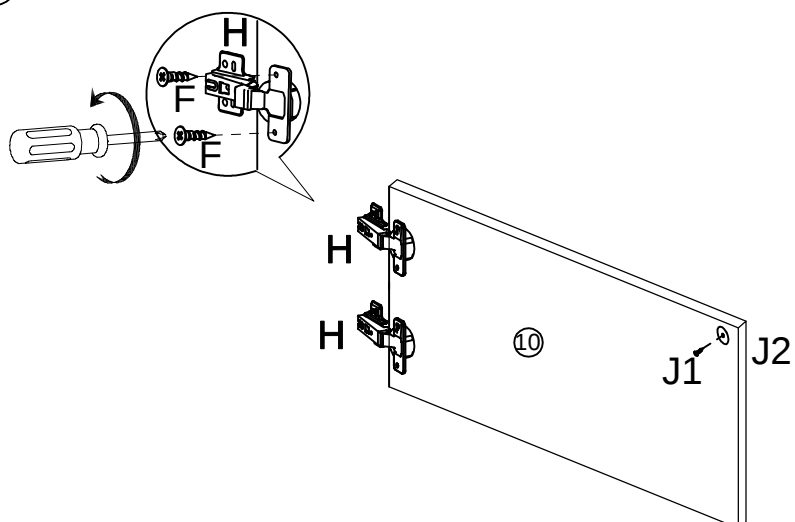

F	H	J1	J2
M3.5×14mm			
			
4PCS	2PCS	1PC	1PC

 
16

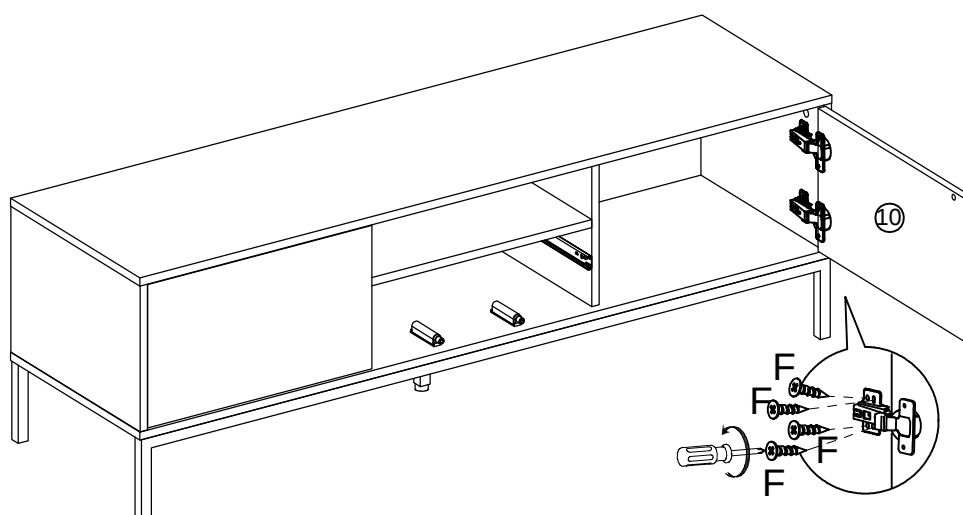


F
M3.5×14mm



8PCS

 17

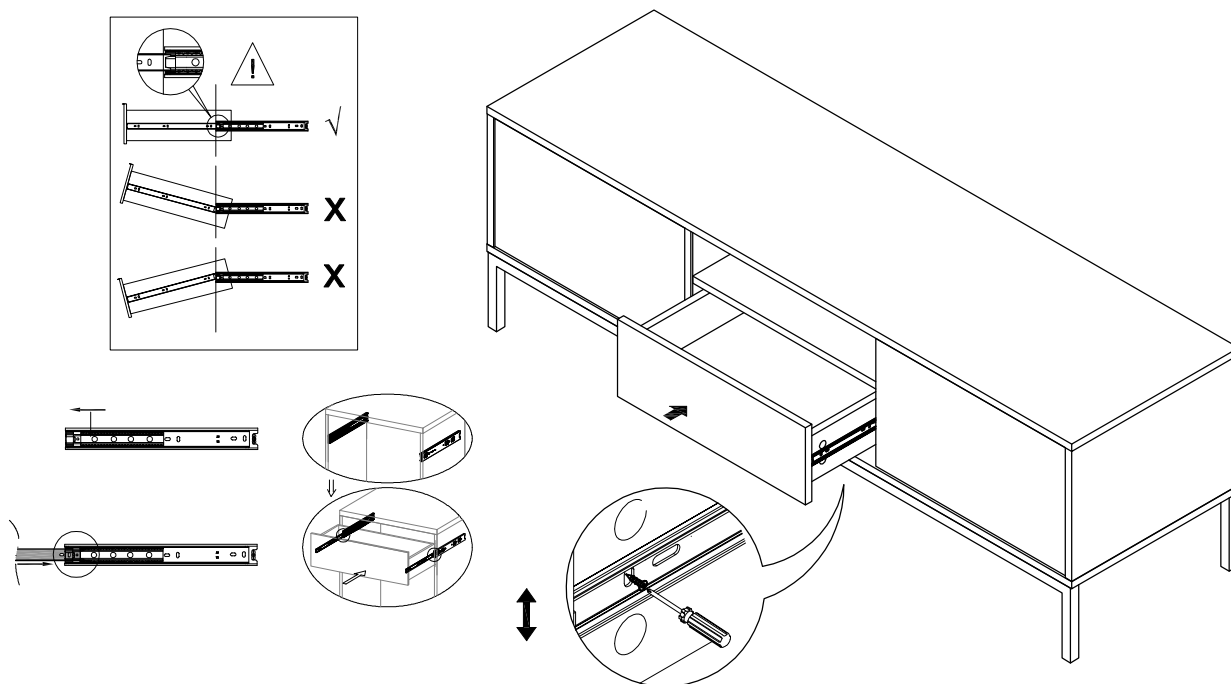

18


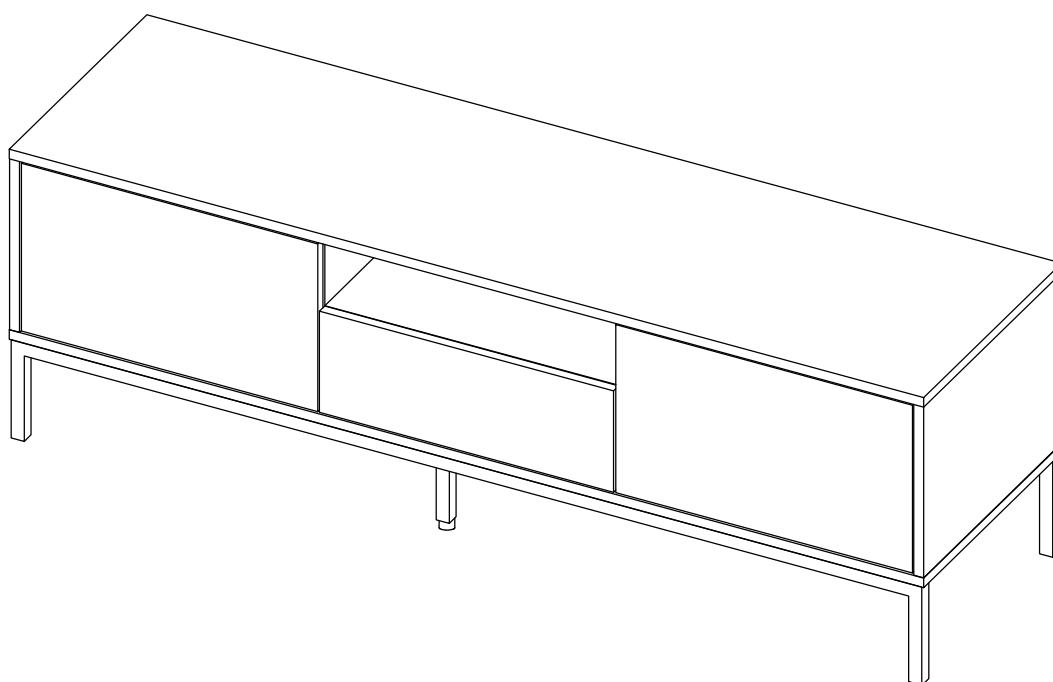 


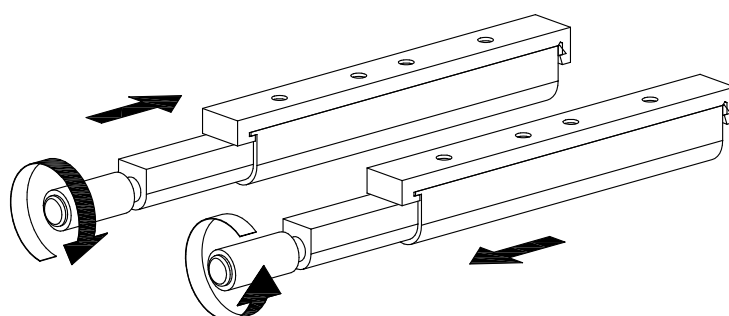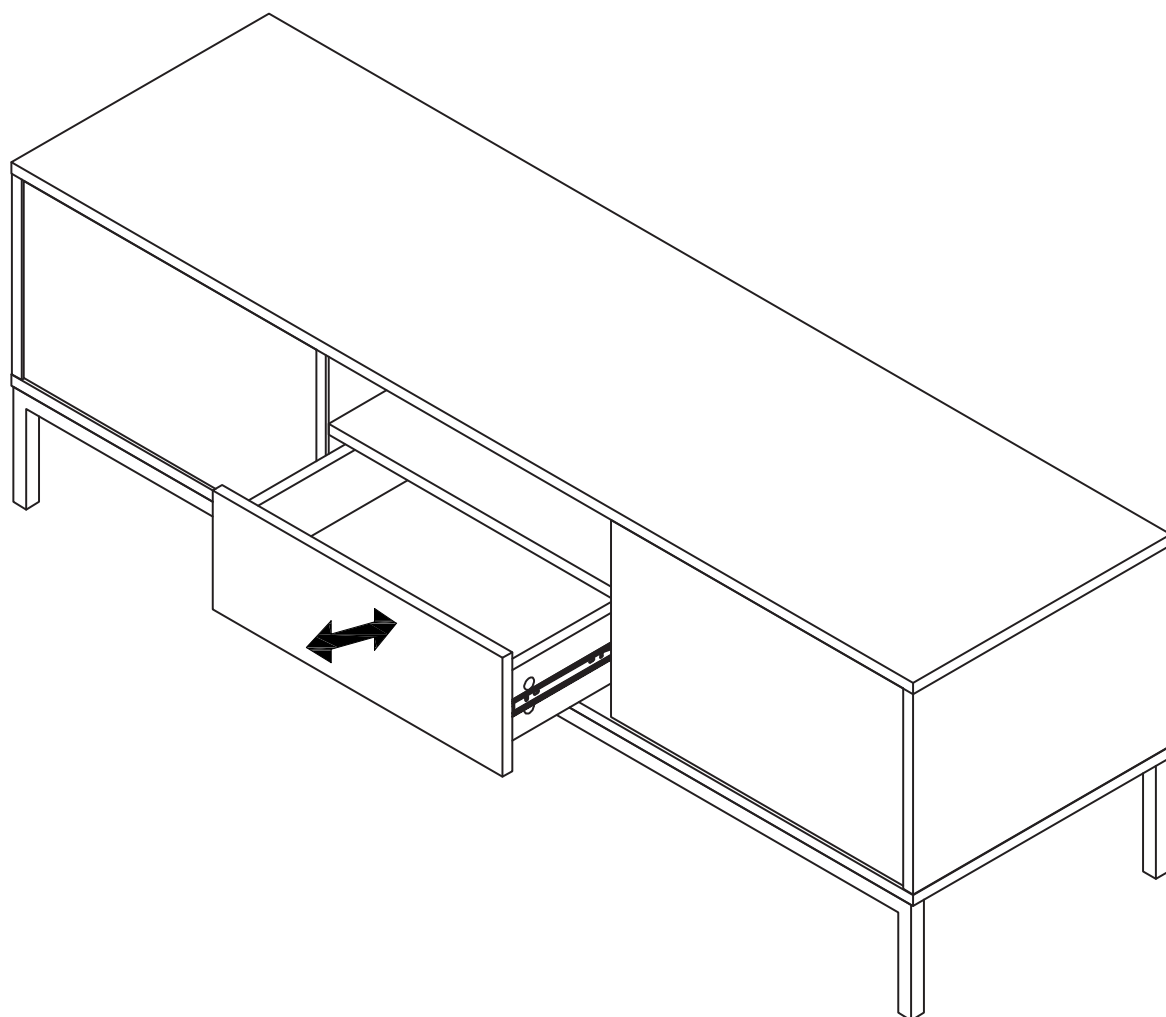  




TO ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).

  STEP 14.1 Open the door.

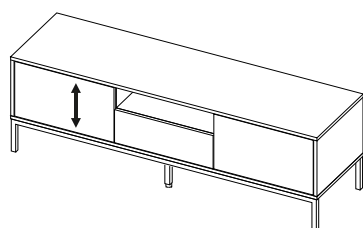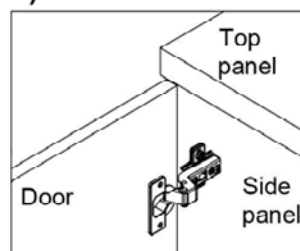

 
STEP 14.2 Adjust the door panels upward or downward

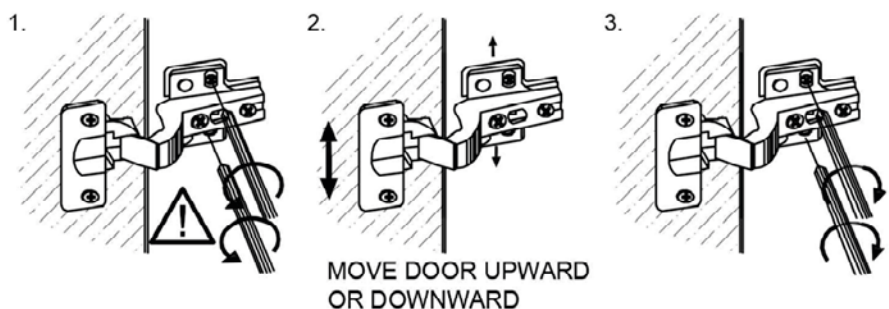


1. Unscrew 2 screws in round holes
Loosen 2 screws in oval holes
a bit.

2. MOVE DOOR UPWARD
OR DOWNWARD

 3. Tighten 2 screws in oval holes.
Screw in 2 screws in round holes

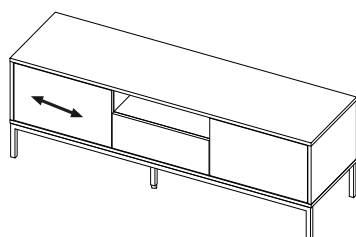

 
STEP 14.3 Adjust the flush between door panel and side panel

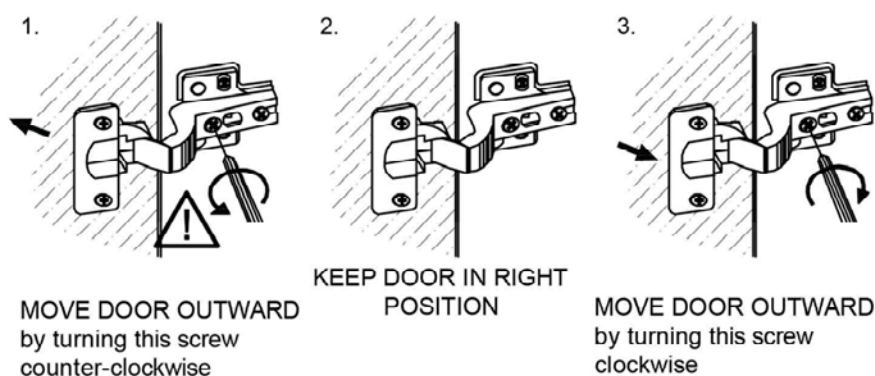


1. MOVE DOOR OUTWARD
by turning this screw
counter-clockwise

2. KEEP DOOR IN RIGHT
POSITION

 3. MOVE DOOR OUTWARD
by turning this screw
clockwise

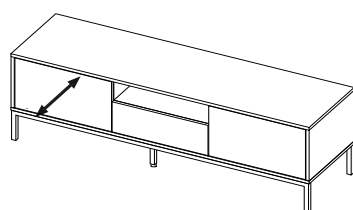

 STEP 14.4 Adjust the gap between door panel and side panel

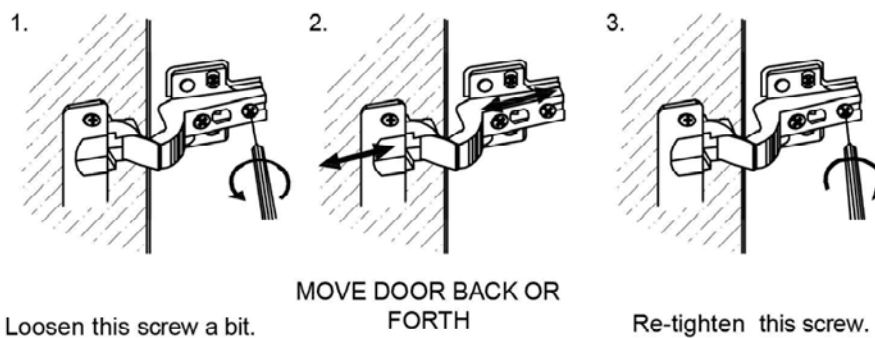

1. Loosen this screw a bit.

2. MOVE DOOR BACK OR
FORTH

3. Re-tighten this screw.