








“5803”

versionsnummer: 18.05.2026



Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

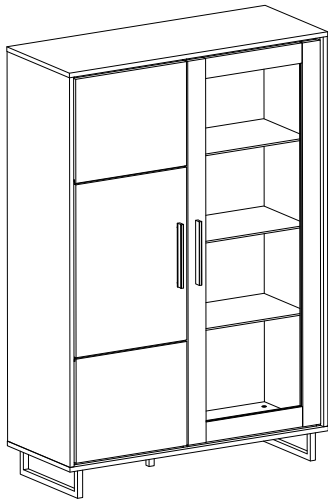




60 min

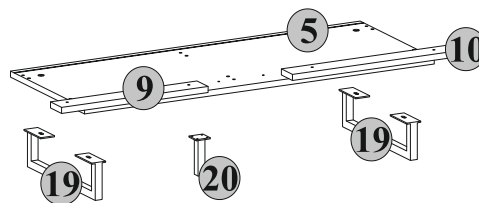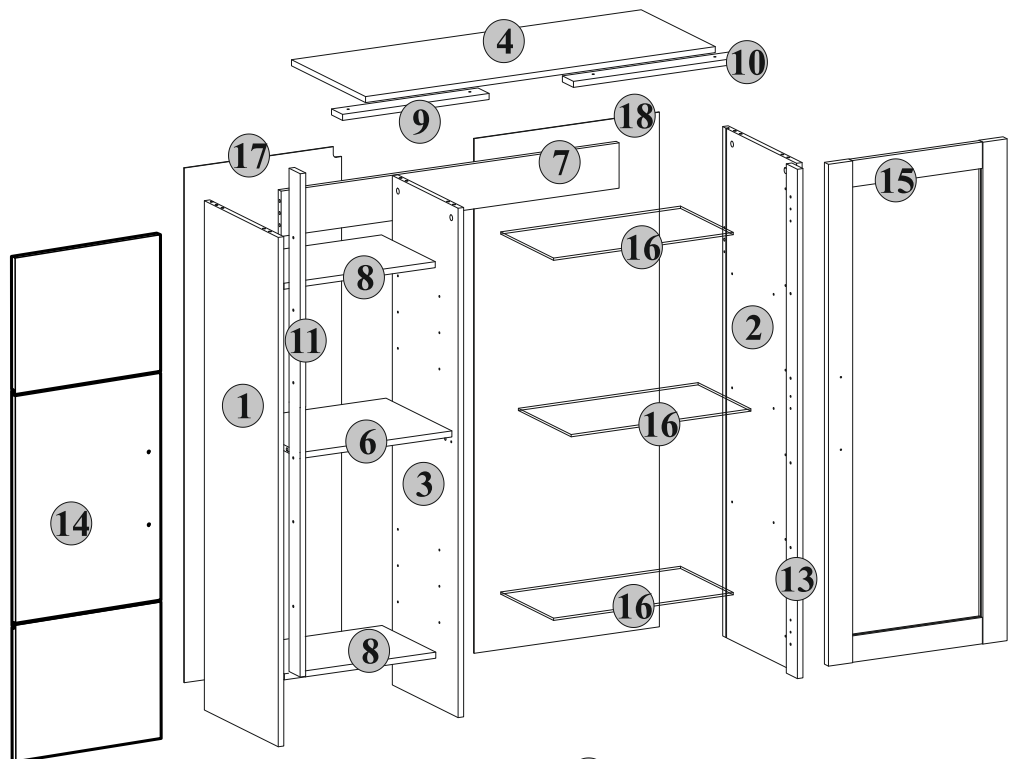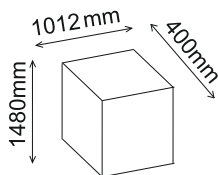




B5





B1





B2










B3








B4




I

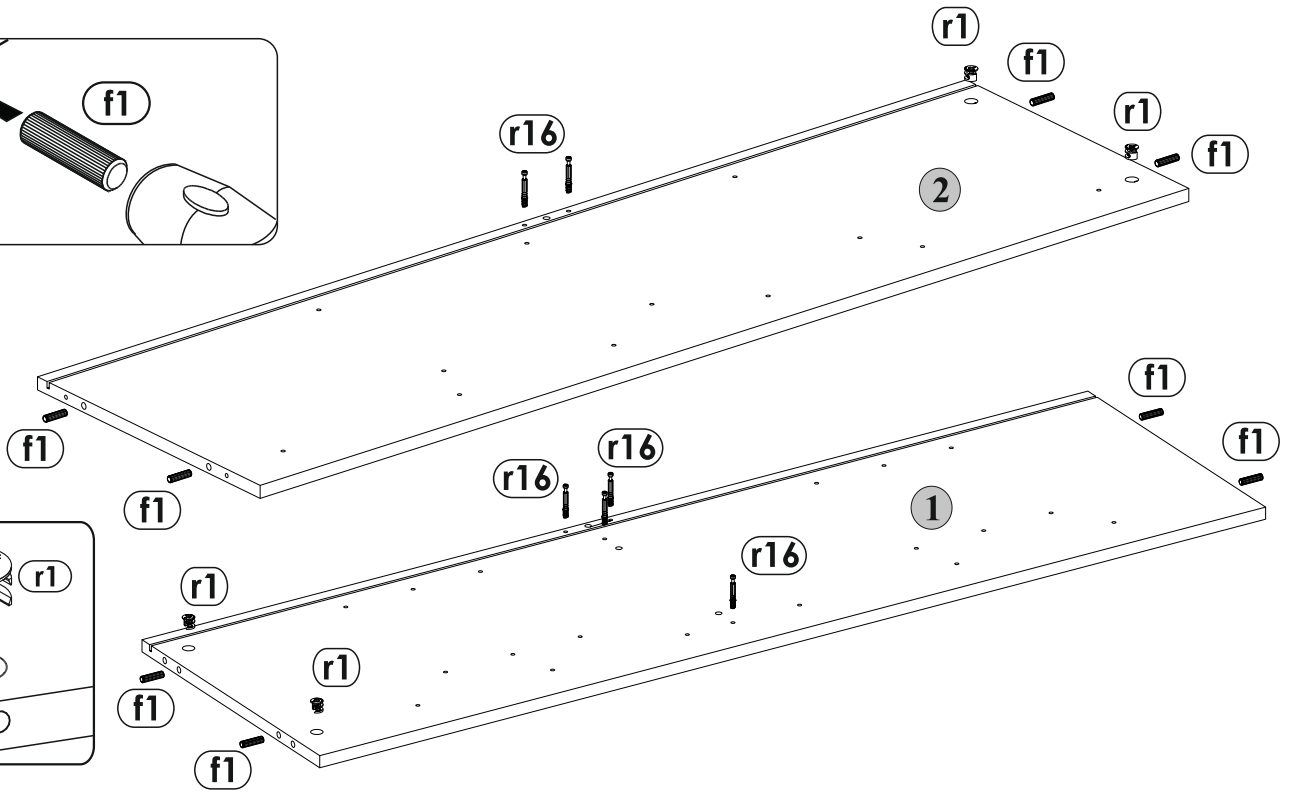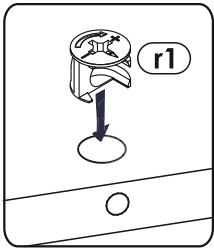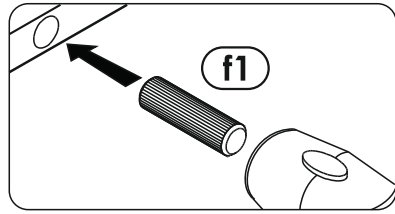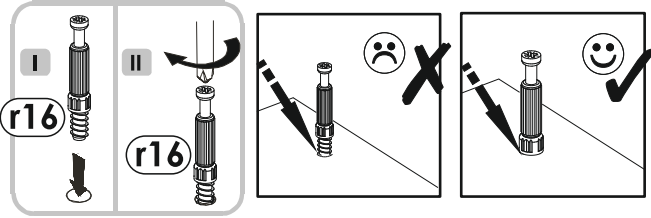


2

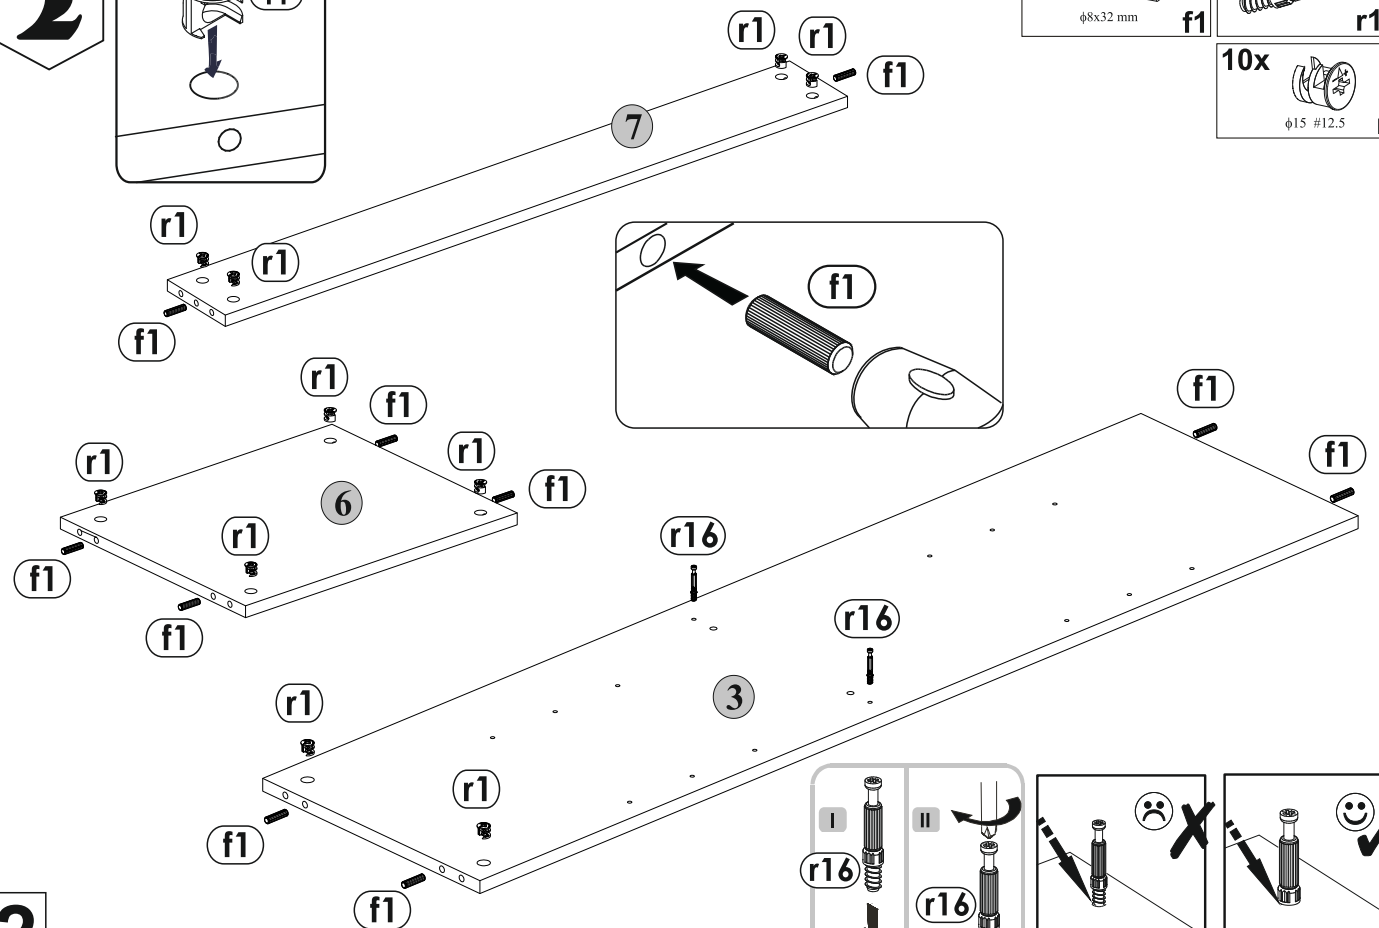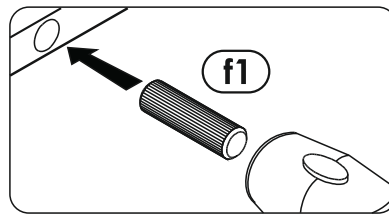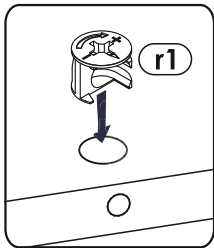


2

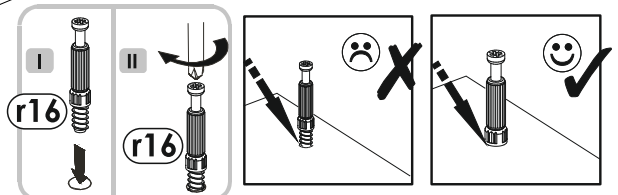


3

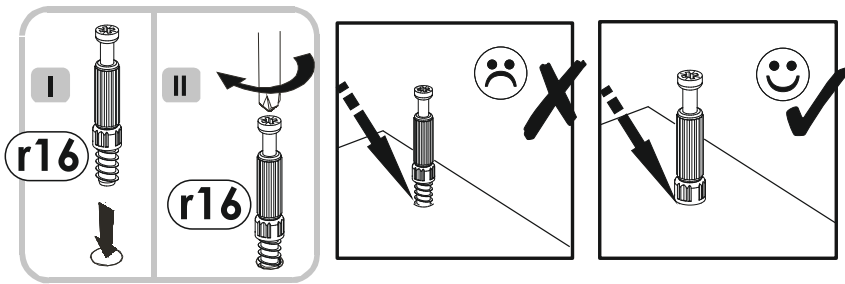

6x
r16

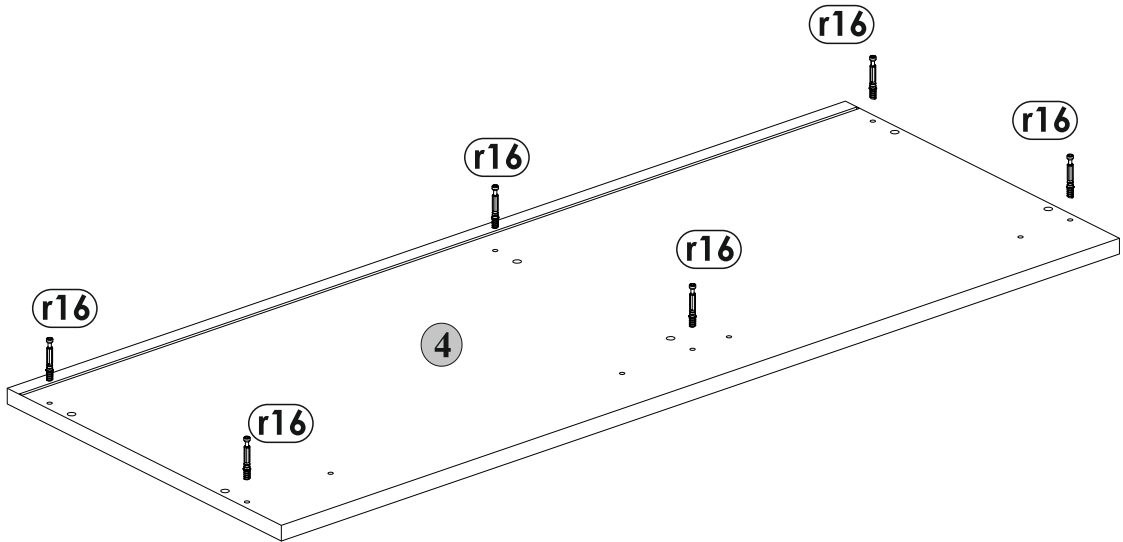


4

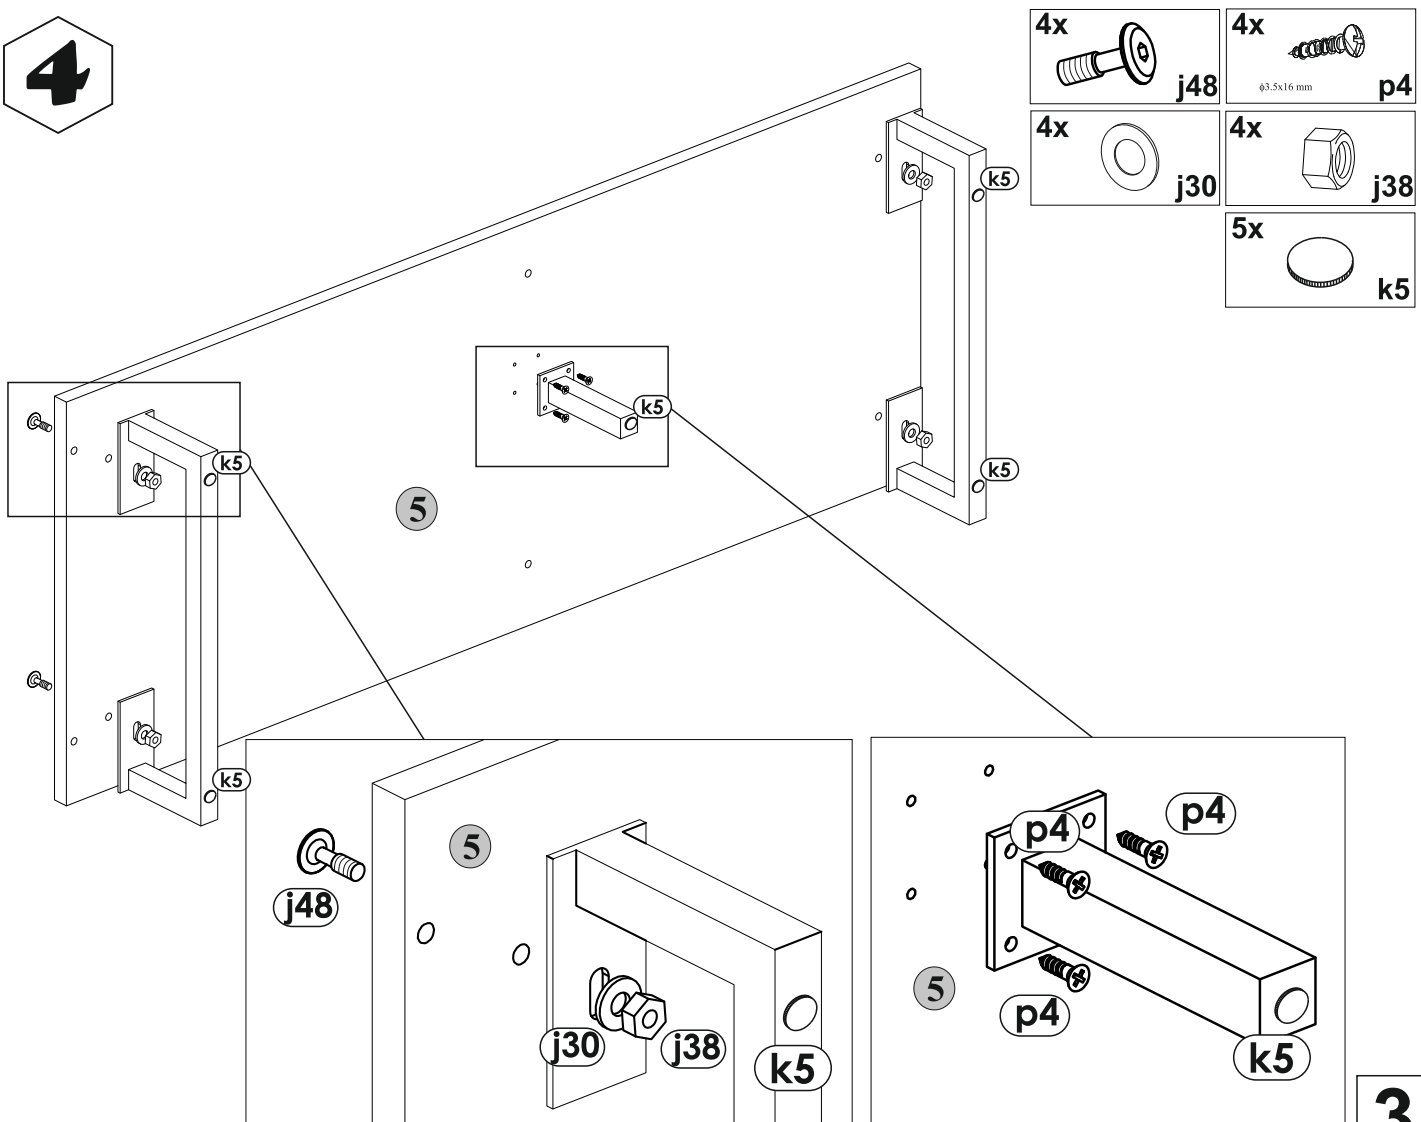


3


5


6x  b3




12x  e2
φ6.3x13 mm

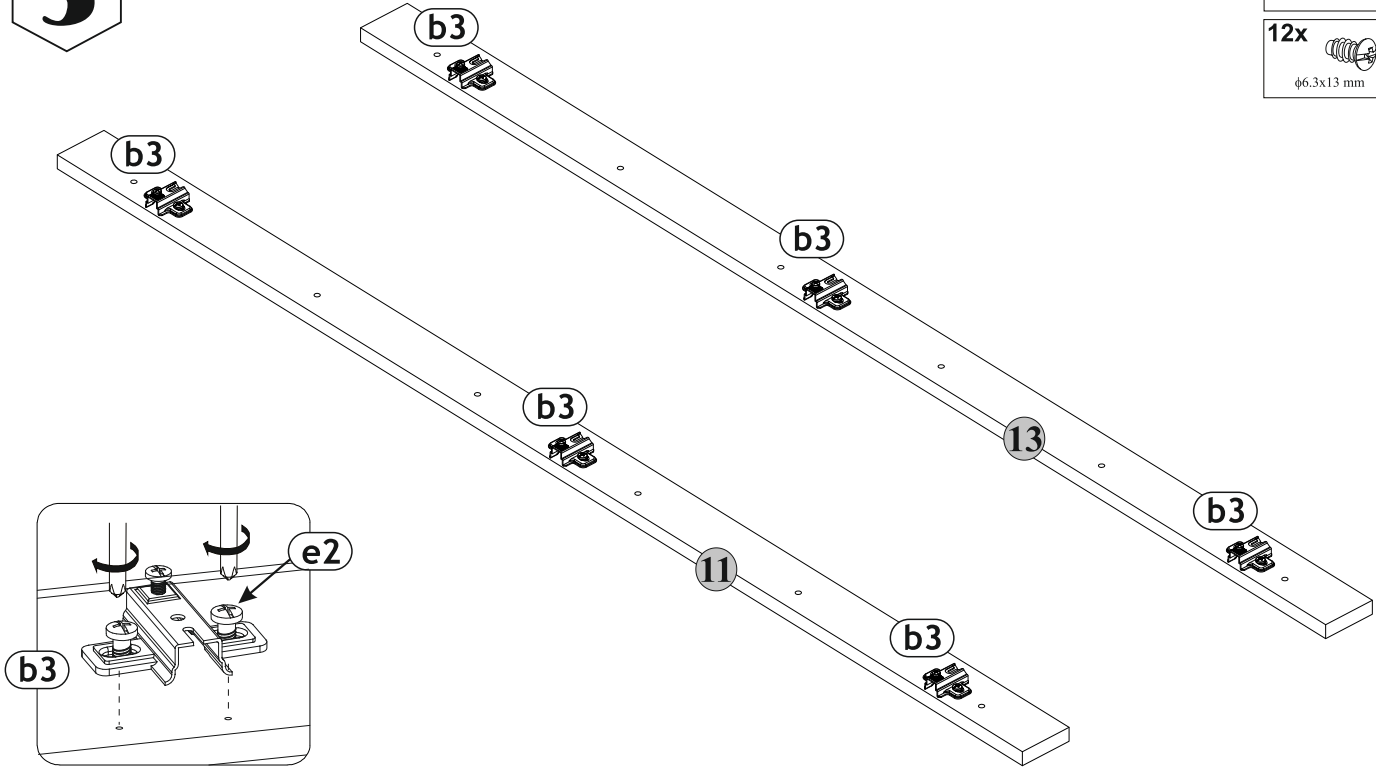

6



6x  a2

12x  p1
φ3.5x16 mm

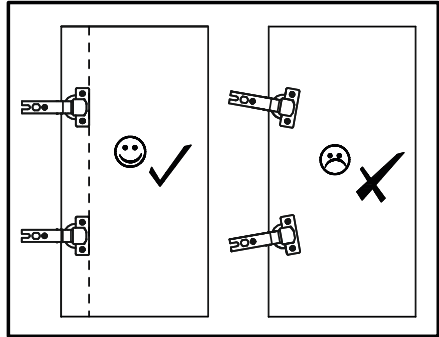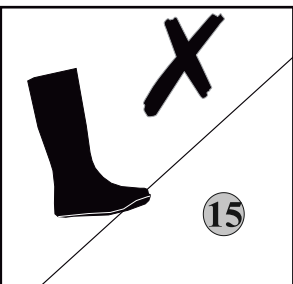
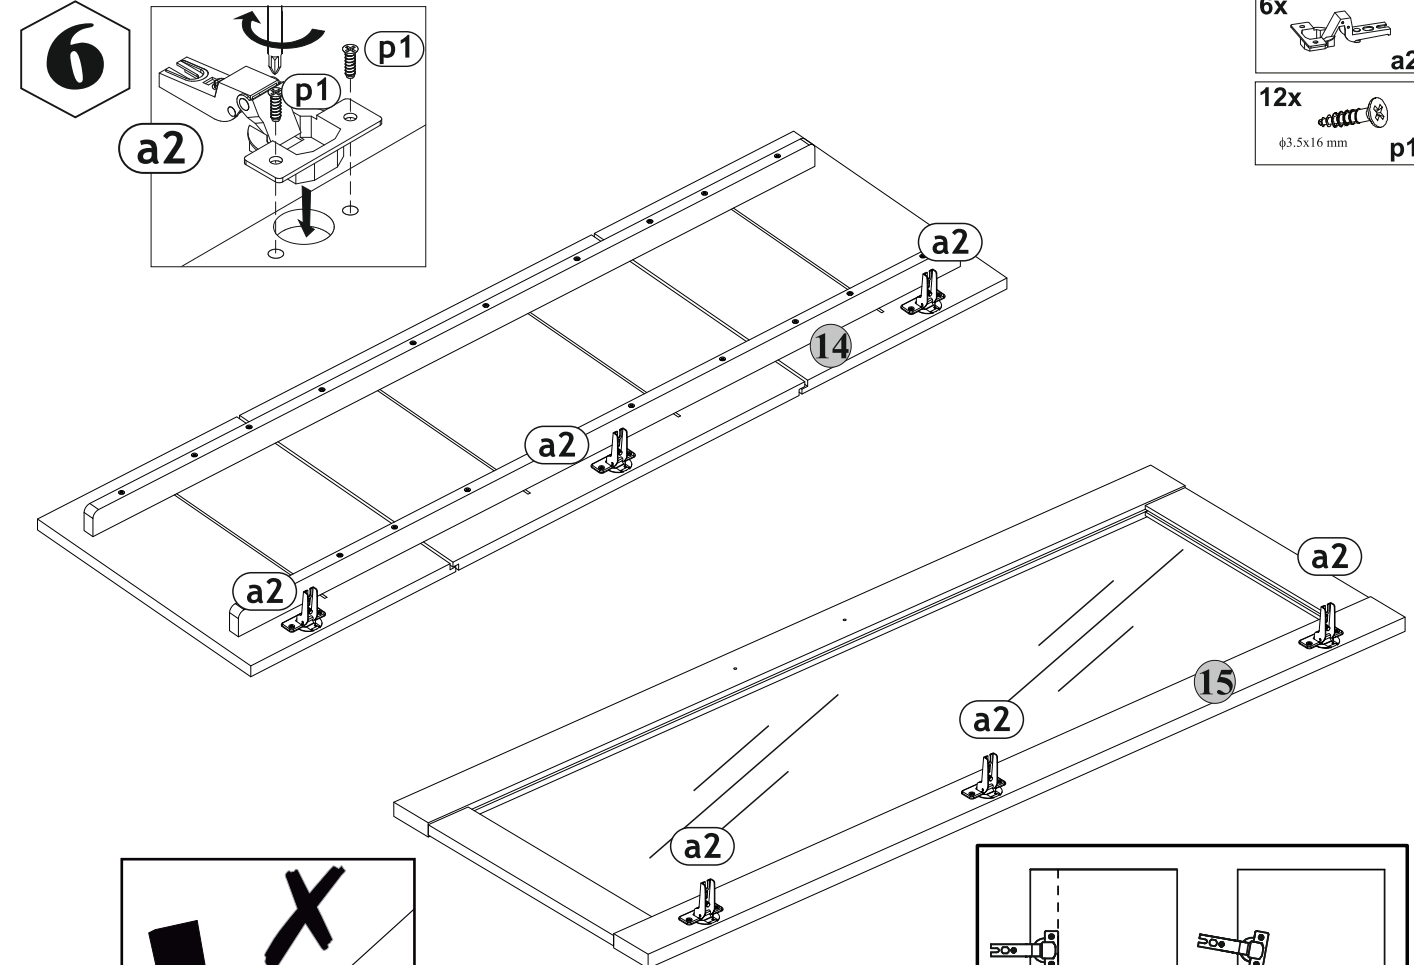


4

7

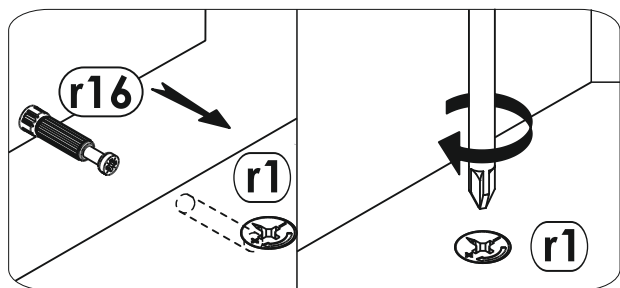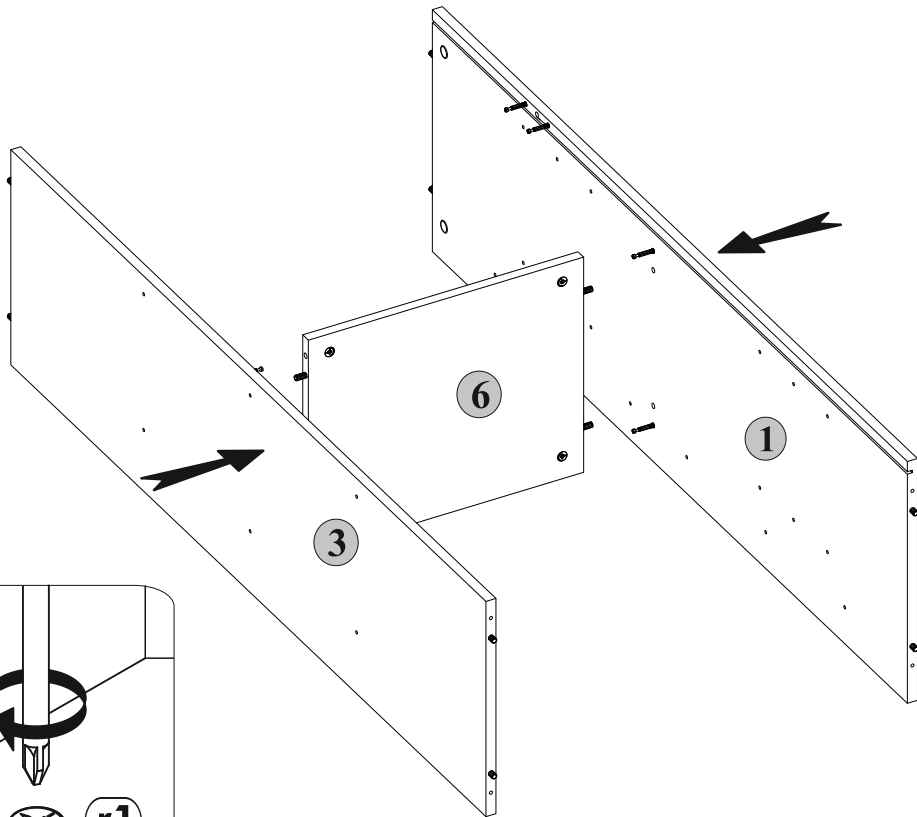


8

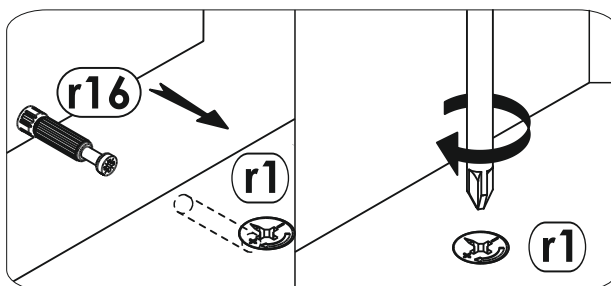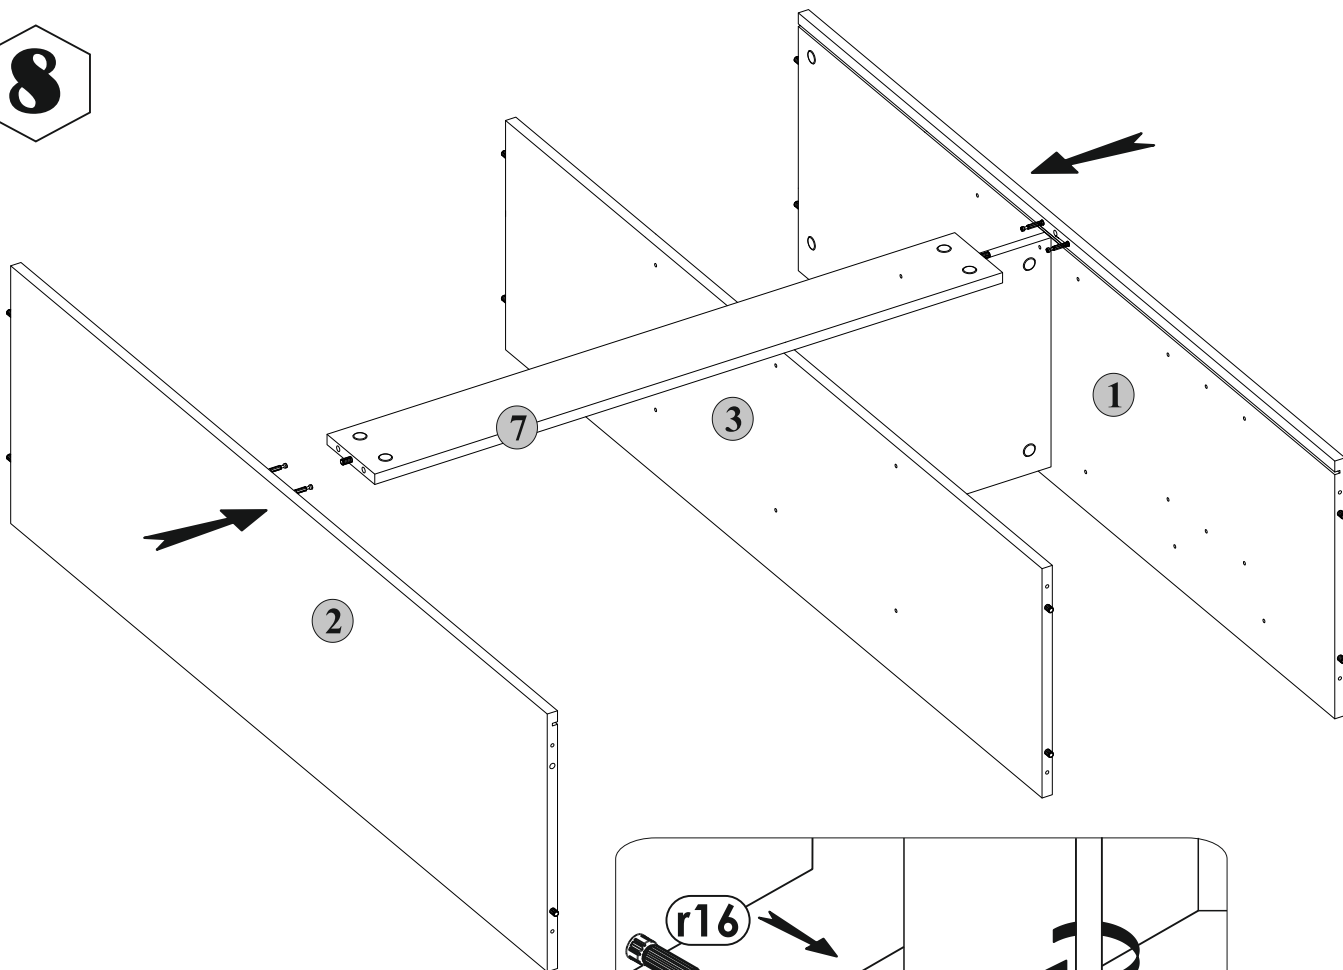


5

9

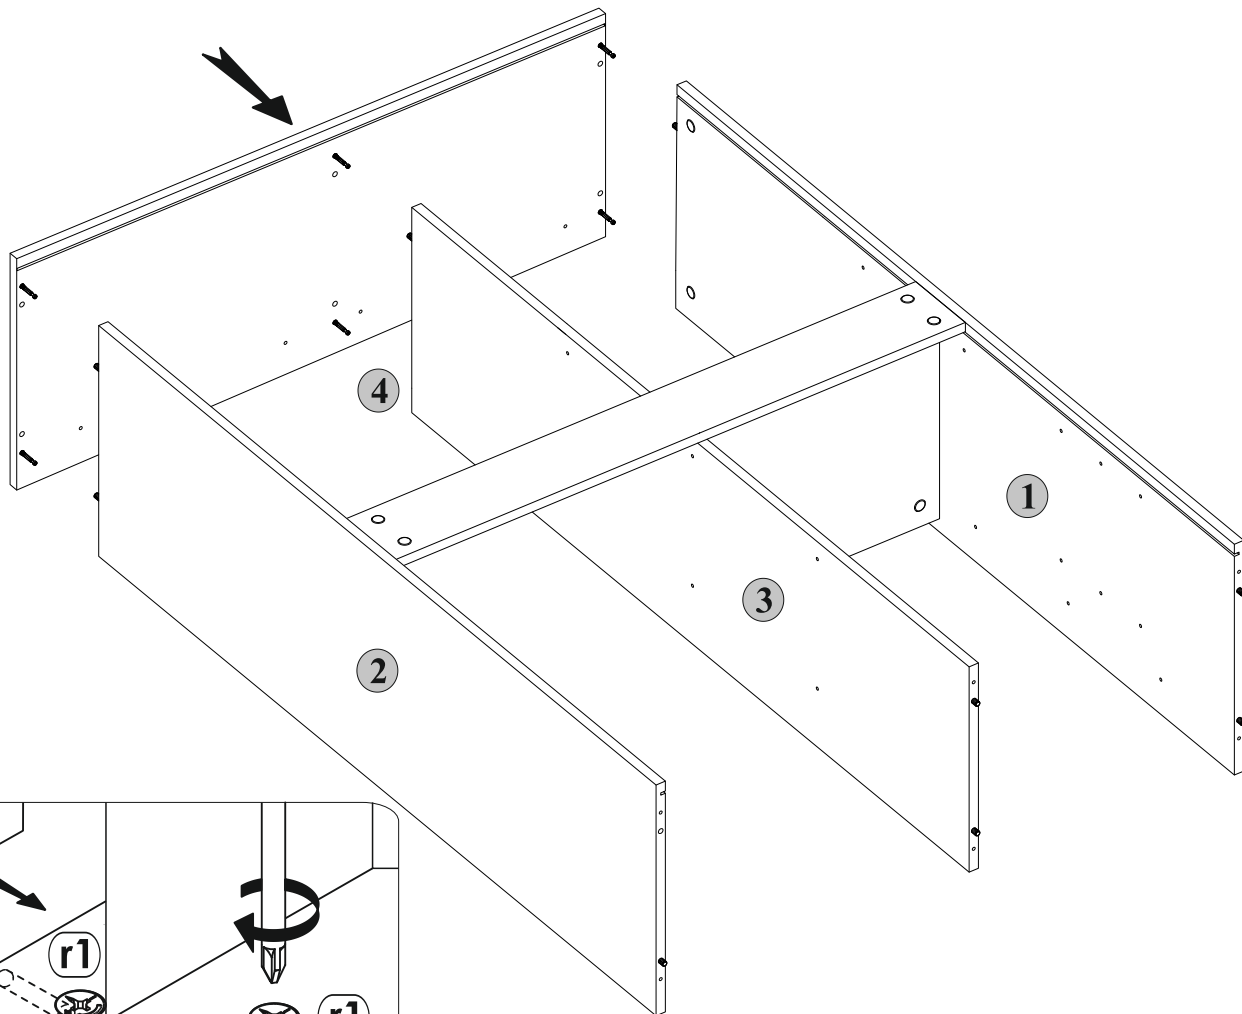

10

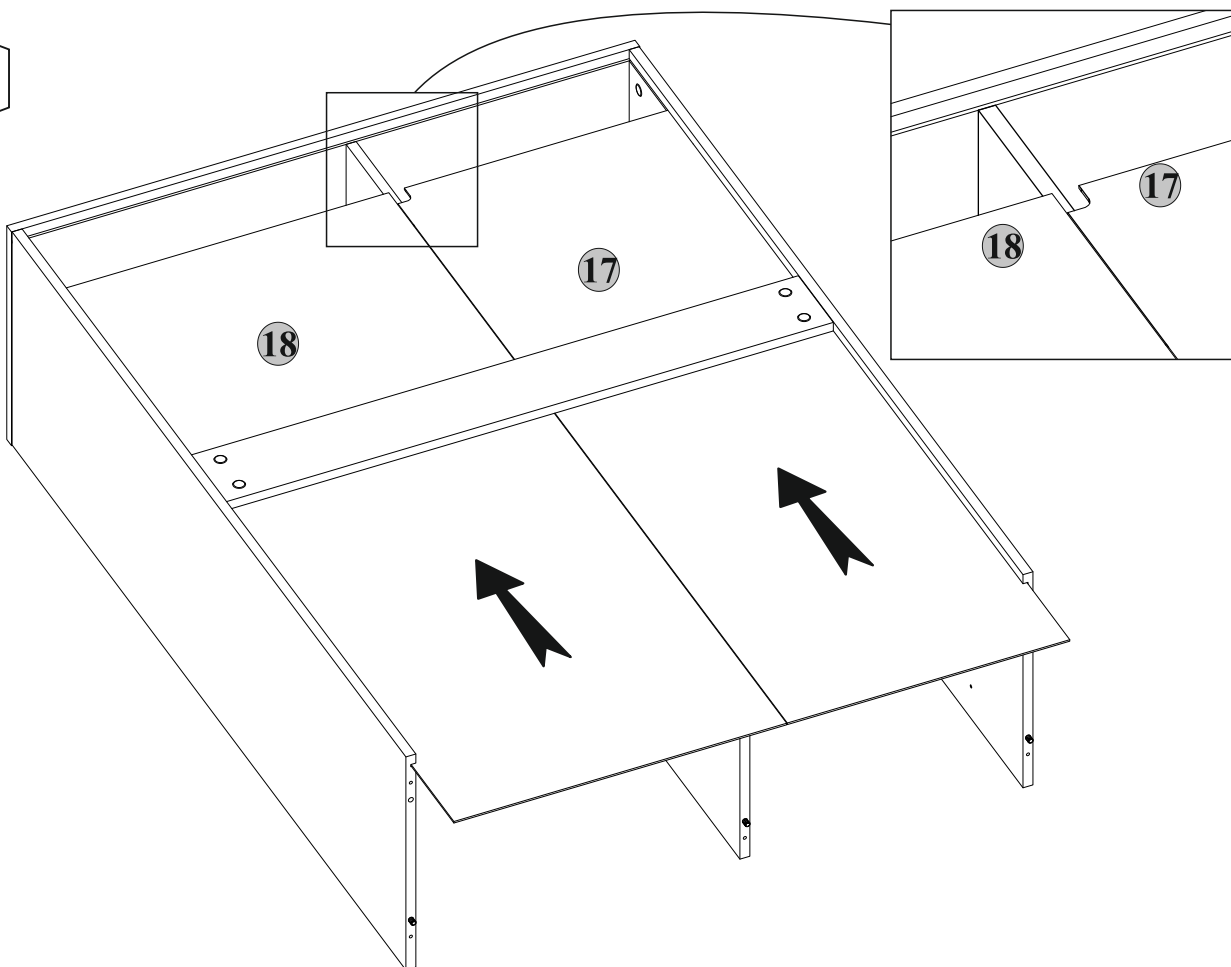




6

11

6x
e1

6x
s1

1x
z1




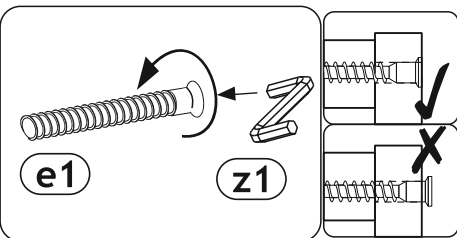
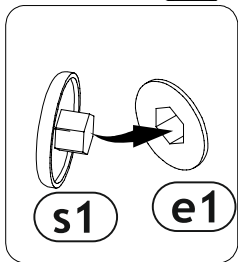
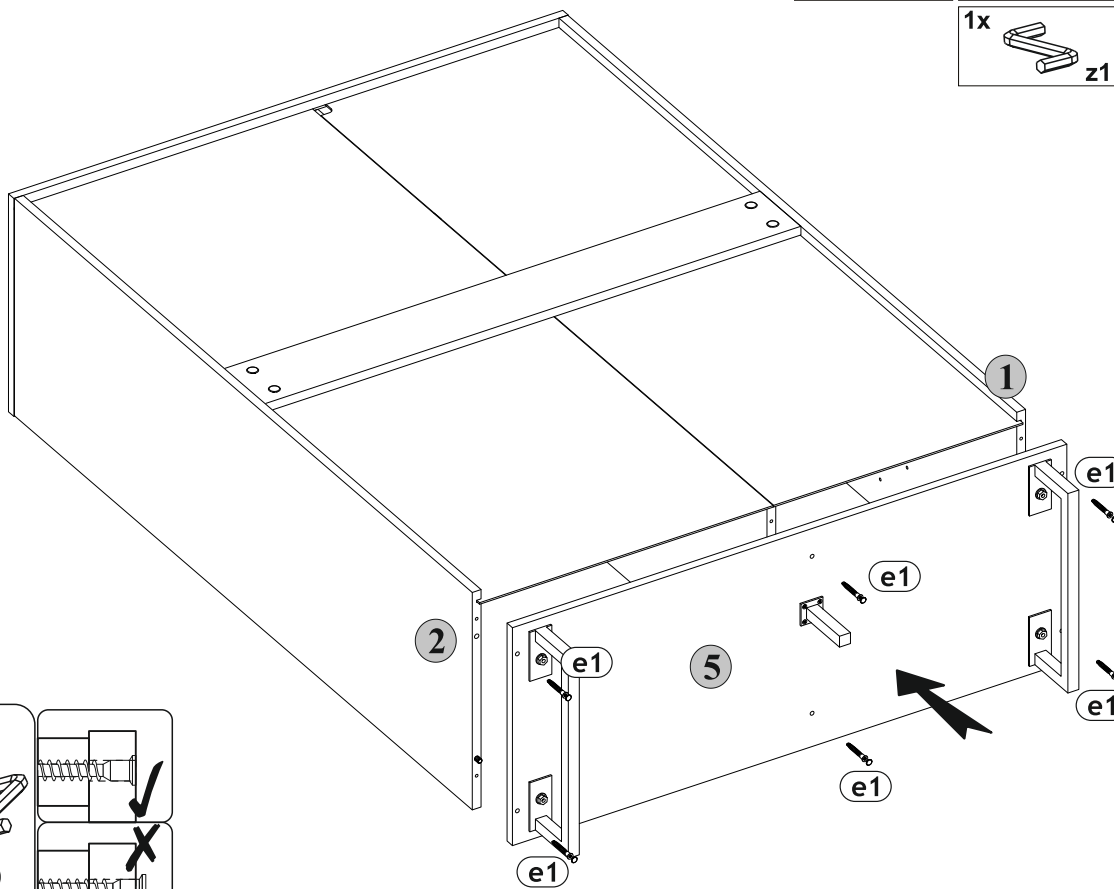


12

14x
l2




4x
l9

4x
p4
φ3.5x16 mm

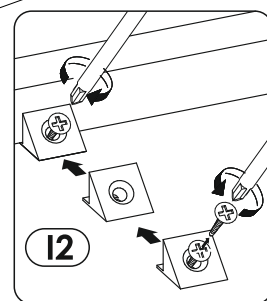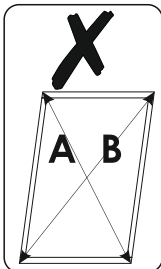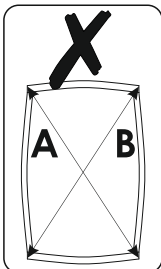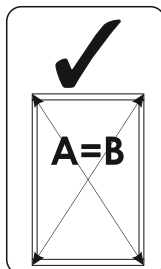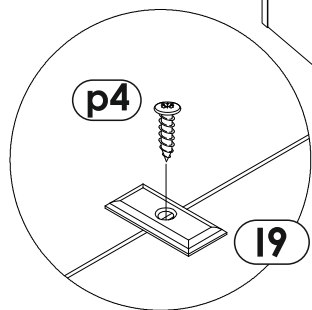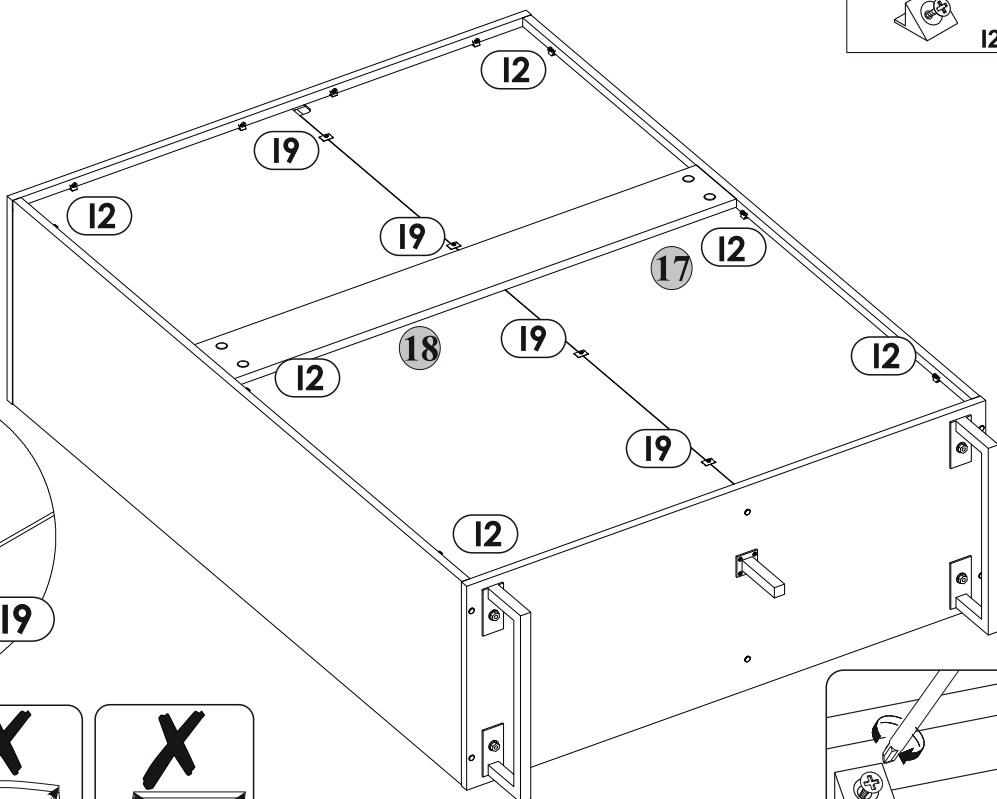

13

20x
φ6x20 mm e23

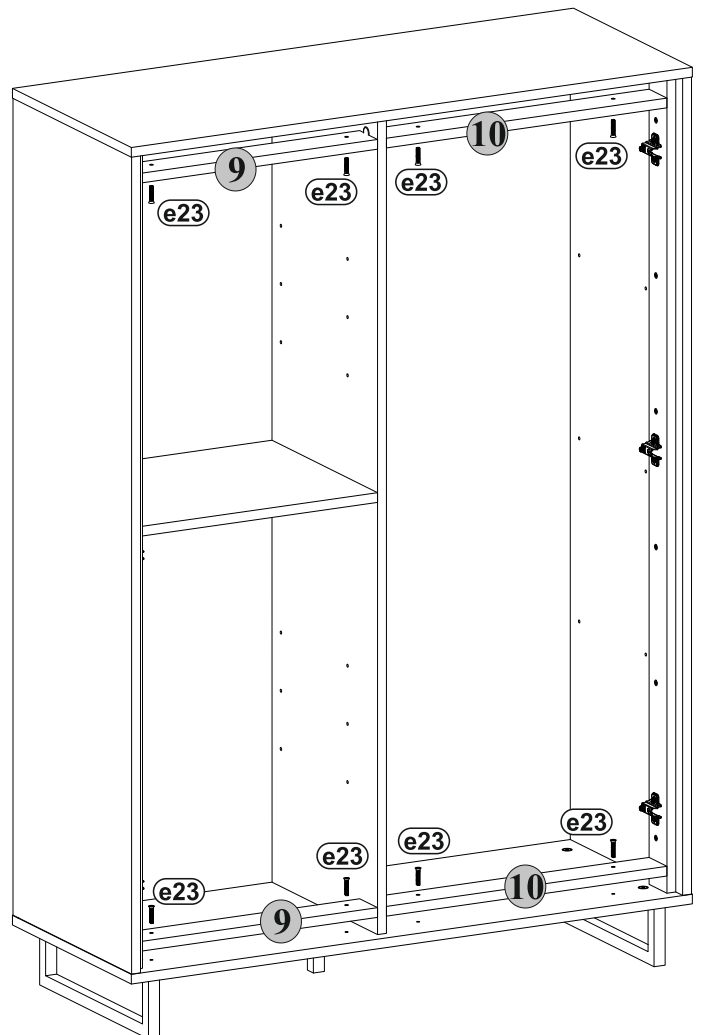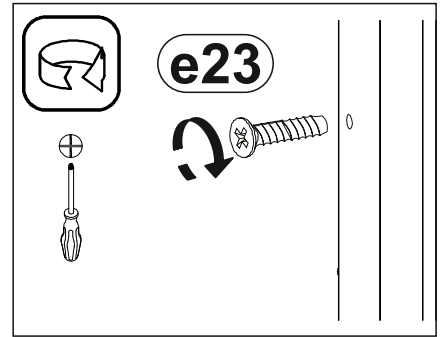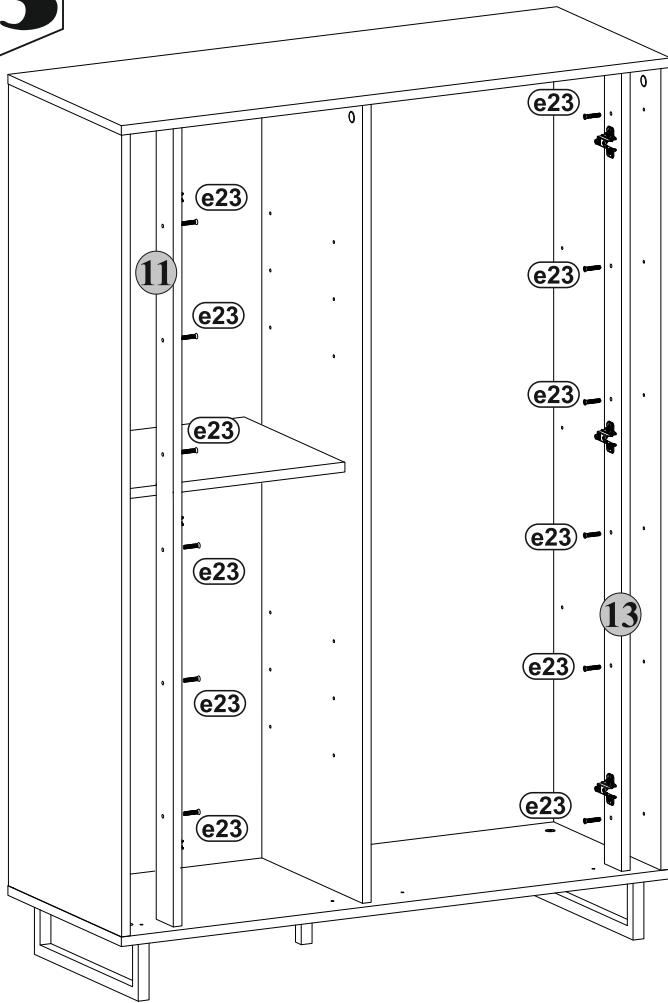

8

I4




4x
p42

2x
c105






1x
t17

1x
n14


2x
φ3.5x16 mm
p1

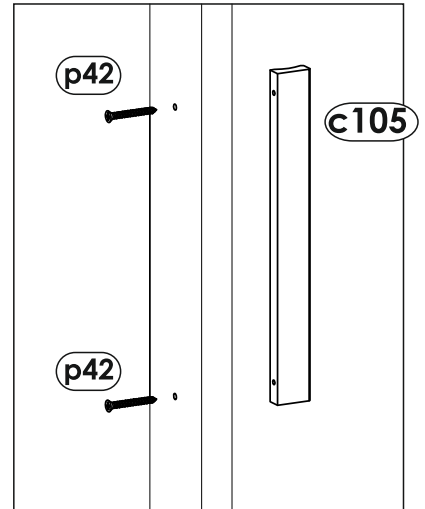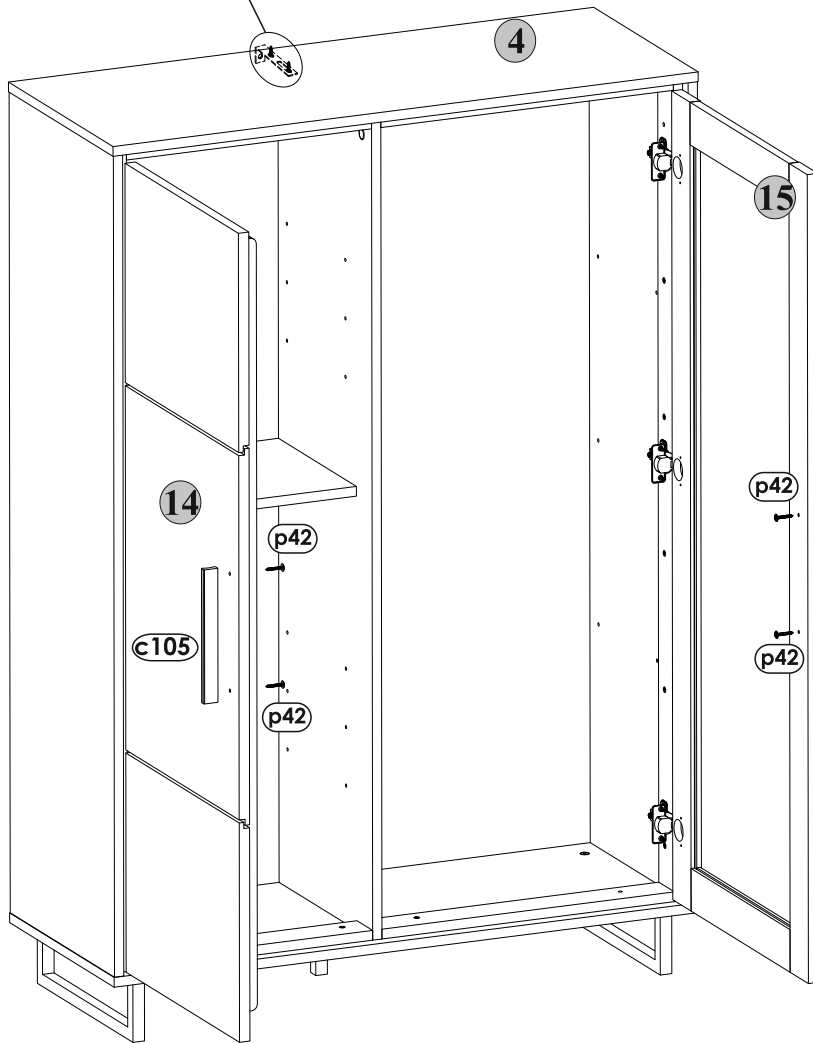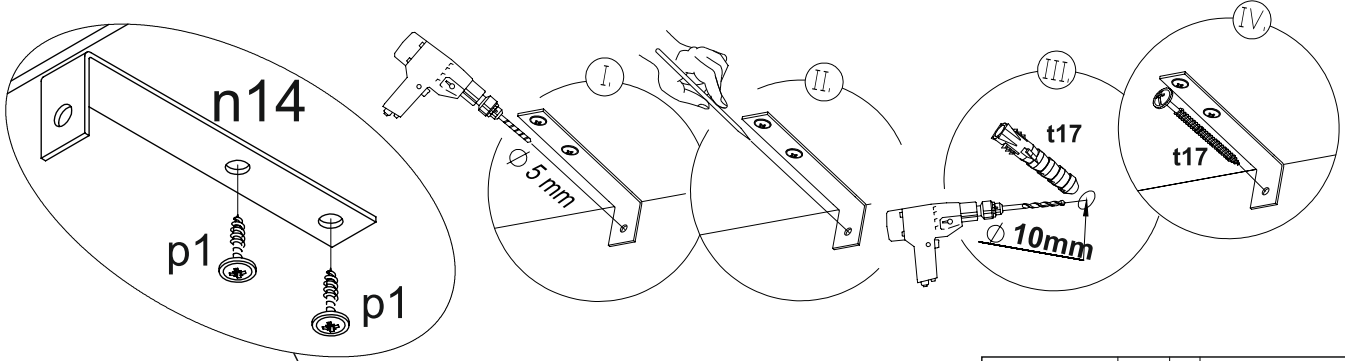

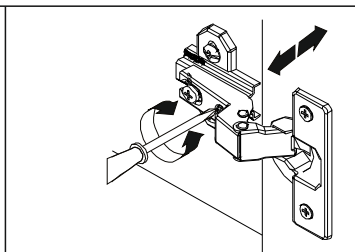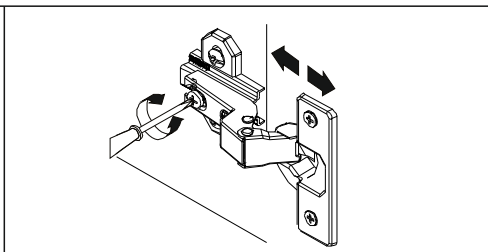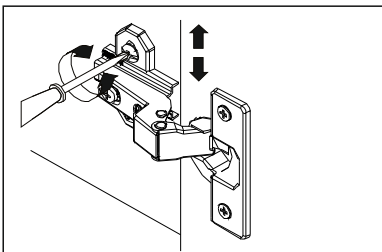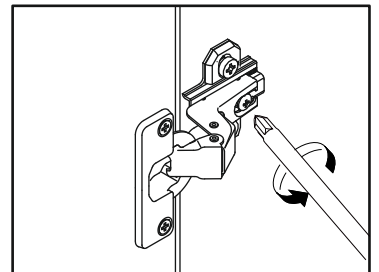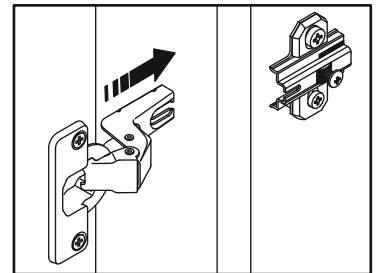

c105






15

12x 
φ5x17 mm d3

8x 
φ5x17 mm d1

14x 
s2

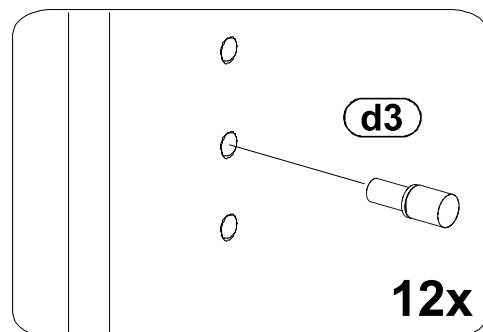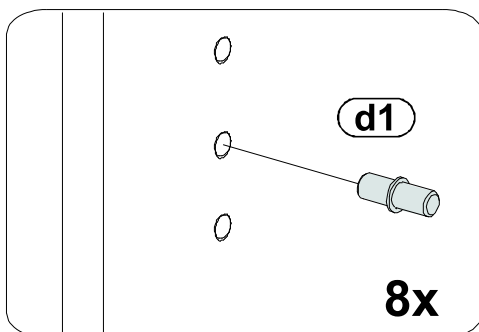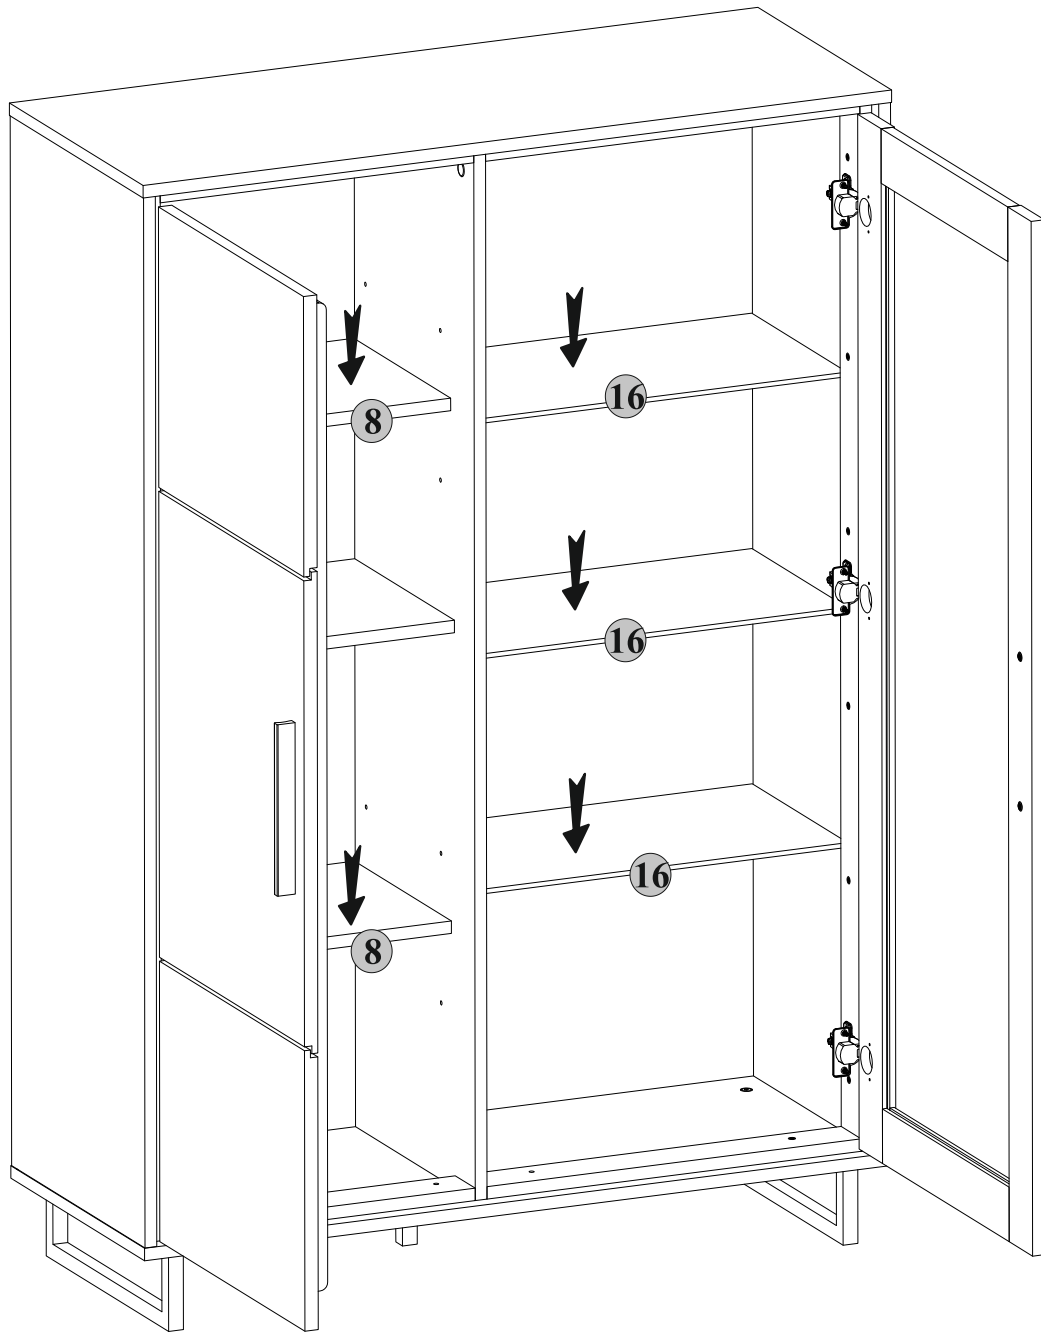

10